

Cobber® Mini

QUICKSTART GUIDE



WHAT'S IN THE BOX



OPERATION


BEFORE USE

BEFORE USE, CONNECT YOUR USB TO POWER VIA USB-C TO EXIT DEMONSTRATION MODE



TURNING ON / OFF

LONG PRESS - TURN LIGHT ON/OFF

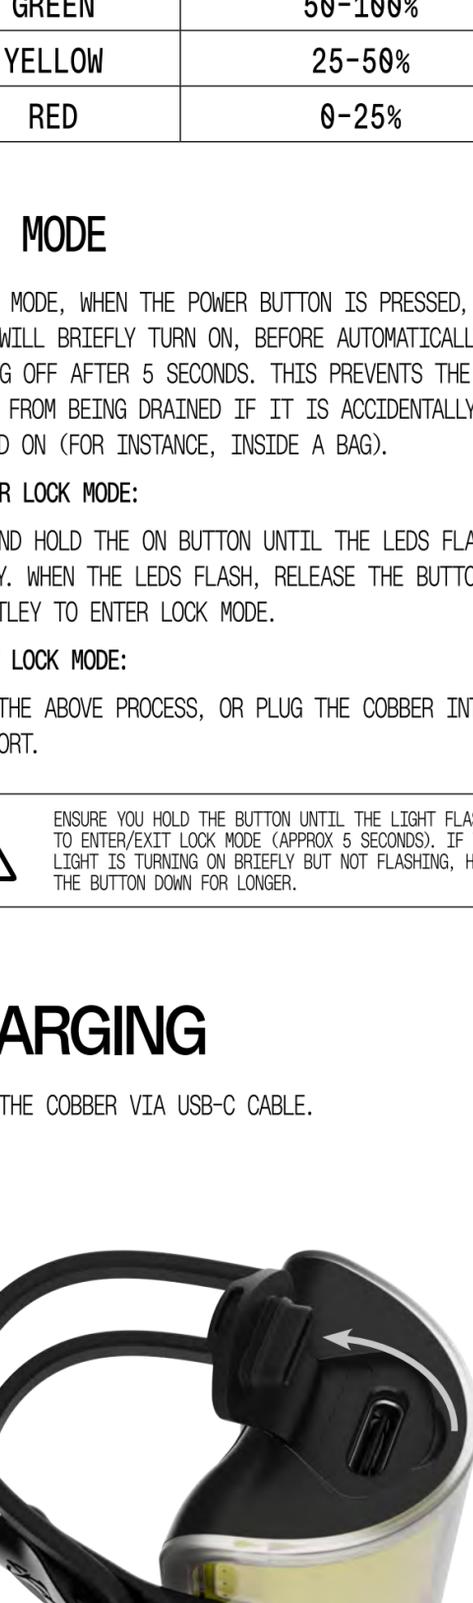

SHORT PRESS - DISPLAYS CHARGE LEVEL

LED COLOUR	CHARGE LEVEL
GREEN	50-100%
YELLOW	25-50%
RED	0-25%

LOCK MODE

IN LOCK MODE, WHEN THE POWER BUTTON IS PRESSED, COBBER WILL BRIEFLY TURN ON, BEFORE AUTOMATICALLY SHUTTING OFF AFTER 5 SECONDS. THIS PREVENTS THE BATTERY FROM BEING DRAINED IF IT IS ACCIDENTALLY SWITCHED ON (FOR INSTANCE, INSIDE A BAG).

TO ENTER LOCK MODE:

PRESS AND HOLD THE ON BUTTON UNTIL THE LEDS FLASH BRIGHTLY. WHEN THE LEDS FLASH, RELEASE THE BUTTON IMMEDIATELY TO ENTER LOCK MODE.

TO EXIT LOCK MODE:

REPEAT THE ABOVE PROCESS, OR PLUG THE COBBER INTO A USB-C PORT.



ENSURE YOU HOLD THE BUTTON UNTIL THE LIGHT FLASHES TO ENTER/EXIT LOCK MODE (APPROX 5 SECONDS). IF THE LIGHT IS TURNING ON BRIEFLY BUT NOT FLASHING, HOLD THE BUTTON DOWN FOR LONGER.

CHARGING

CHARGE THE COBBER VIA USB-C CABLE.




LED STATUS	CHARGE LEVEL
GREEN / OFF	FULLY CHARGED
YELLOW	CHARGING

LOW BATTERY

WHEN CHARGE DROPS BELOW 15%, THE INDICATOR LIGHT WILL BLINK RED, AND LIGHT OUTPUT WILL REDUCE TO 50% TO CONSERVE BATTERY.

MOUNTING

PULL STRAP AROUND SEAT POST AND LATCH TO SECURE LIGHT.

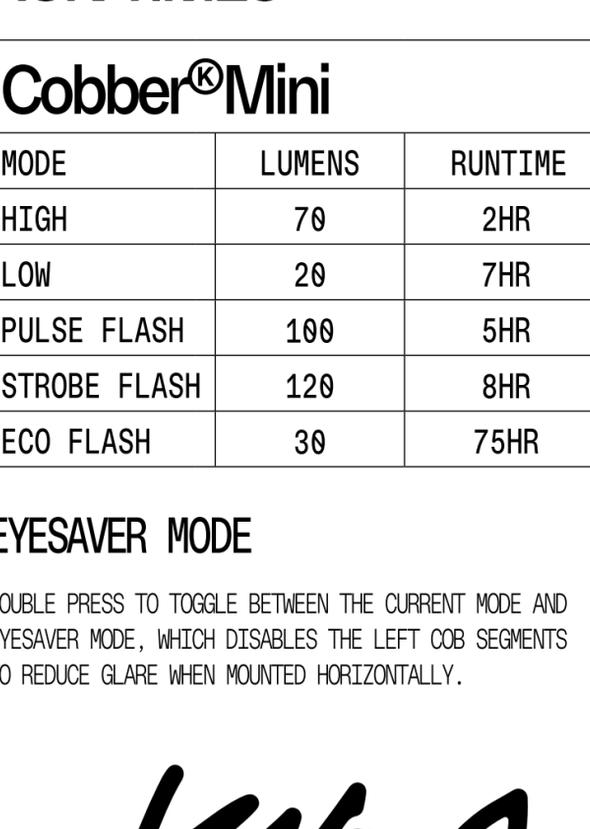

RUN TIMES

Cobber® Mini		
MODE	LUMENS	RUNTIME
HIGH	70	2HR
LOW	20	7HR
PULSE FLASH	100	5HR
STROBE FLASH	120	8HR
ECO FLASH	30	75HR

EYESAVER MODE

DOUBLE PRESS TO TOGGLE BETWEEN THE CURRENT MODE AND EYESAVER MODE, WHICH DISABLES THE LEFT COB SEGMENTS TO REDUCE GLARE WHEN MOUNTED HORIZONTALLY.

TECHNICALLY UNCONVENTIONAL

DESIGNED IN NAARM [MELBOURNE] BY KNOG ©
2 YEAR WARRANTY-DETAILS AT KNOG.COM