

# Cobber® Mini

## QUICKSTART GUIDE



## WHAT'S IN THE BOX



## OPERATION


### BEFORE USE

BEFORE USE, CONNECT YOUR USB TO POWER VIA USB-C TO EXIT DEMONSTRATION MODE



### TURNING ON / OFF

LONG PRESS - TURN LIGHT ON/OFF

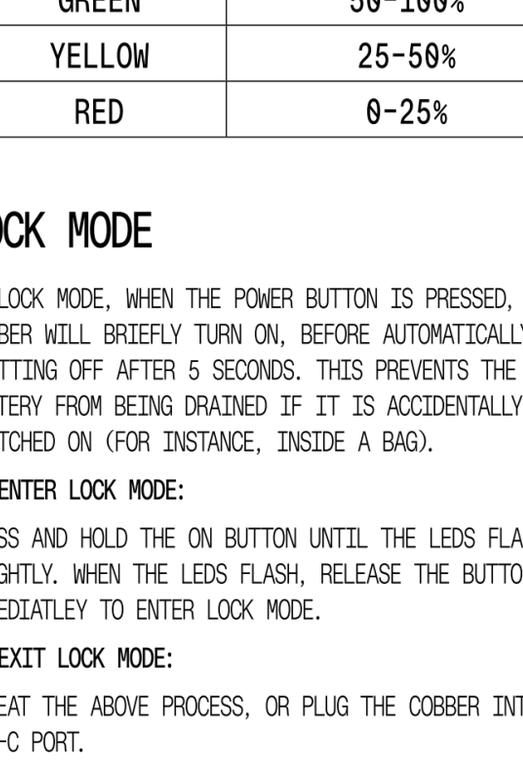

SHORT PRESS - DISPLAYS CHARGE LEVEL



LED COLOUR	CHARGE LEVEL
GREEN	50-100%
YELLOW	25-50%
RED	0-25%

### LOCK MODE

IN LOCK MODE, WHEN THE POWER BUTTON IS PRESSED, COBBER WILL BRIEFLY TURN ON, BEFORE AUTOMATICALLY SHUTTING OFF AFTER 5 SECONDS. THIS PREVENTS THE BATTERY FROM BEING DRAINED IF IT IS ACCIDENTALLY SWITCHED ON (FOR INSTANCE, INSIDE A BAG).

TO ENTER LOCK MODE:

PRESS AND HOLD THE ON BUTTON UNTIL THE LEDS FLASH BRIGHTLY. WHEN THE LEDS FLASH, RELEASE THE BUTTON IMMEDIATELY TO ENTER LOCK MODE.

TO EXIT LOCK MODE:


REPEAT THE ABOVE PROCESS, OR PLUG THE COBBER INTO A USB-C PORT.



ENSURE YOU HOLD THE BUTTON UNTIL THE LIGHT FLASHES TO ENTER/EXIT LOCK MODE (APPROX 5 SECONDS). IF THE LIGHT IS TURNING ON BRIEFLY BUT NOT FLASHING, HOLD THE BUTTON DOWN FOR LONGER.

## CHARGING

CHARGE THE COBBER VIA USB-C CABLE.

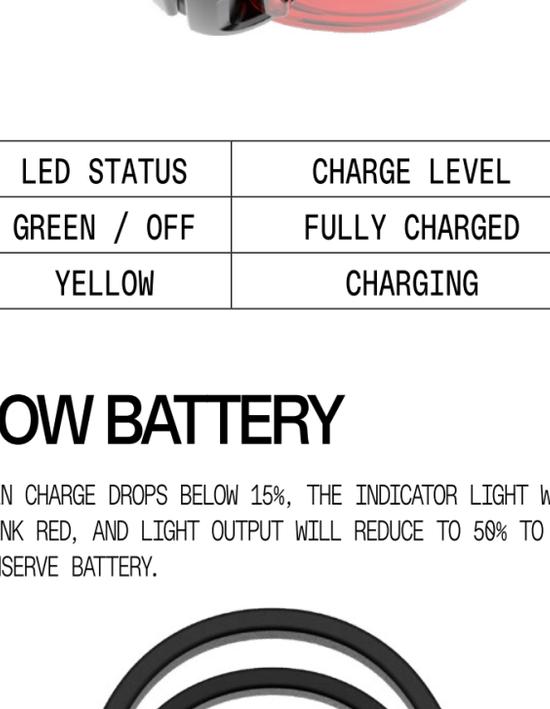

LED STATUS	CHARGE LEVEL
GREEN / OFF	FULLY CHARGED
YELLOW	CHARGING


## LOW BATTERY

WHEN CHARGE DROPS BELOW 15%, THE INDICATOR LIGHT WILL BLINK RED, AND LIGHT OUTPUT WILL REDUCE TO 50% TO CONSERVE BATTERY.



## MOUNTING

PULL STRAP AROUND SEAT POST AND LATCH TO SECURE LIGHT.

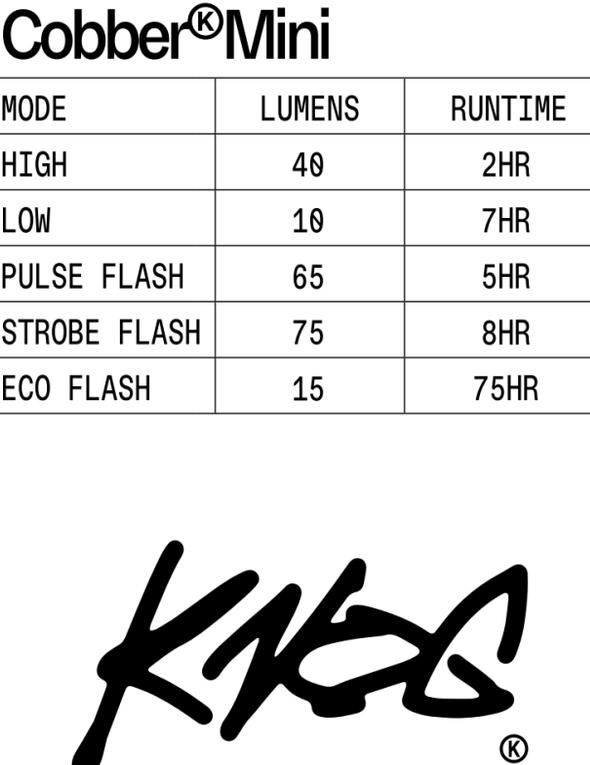

## RUN TIMES

Cobber® Mini		
MODE	LUMENS	RUNTIME
HIGH	40	2HR
LOW	10	7HR
PULSE FLASH	65	5HR
STROBE FLASH	75	8HR
ECO FLASH	15	75HR



TECHNICALLY  
UNCONVENTIONAL

DESIGNED IN NAARM [MELBOURNE] BY KNOG ©  
2 YEAR WARRANTY-DETAILS AT KNOG.COM