


Oi^K Luxe


QUICKSTART GUIDE

KNOG

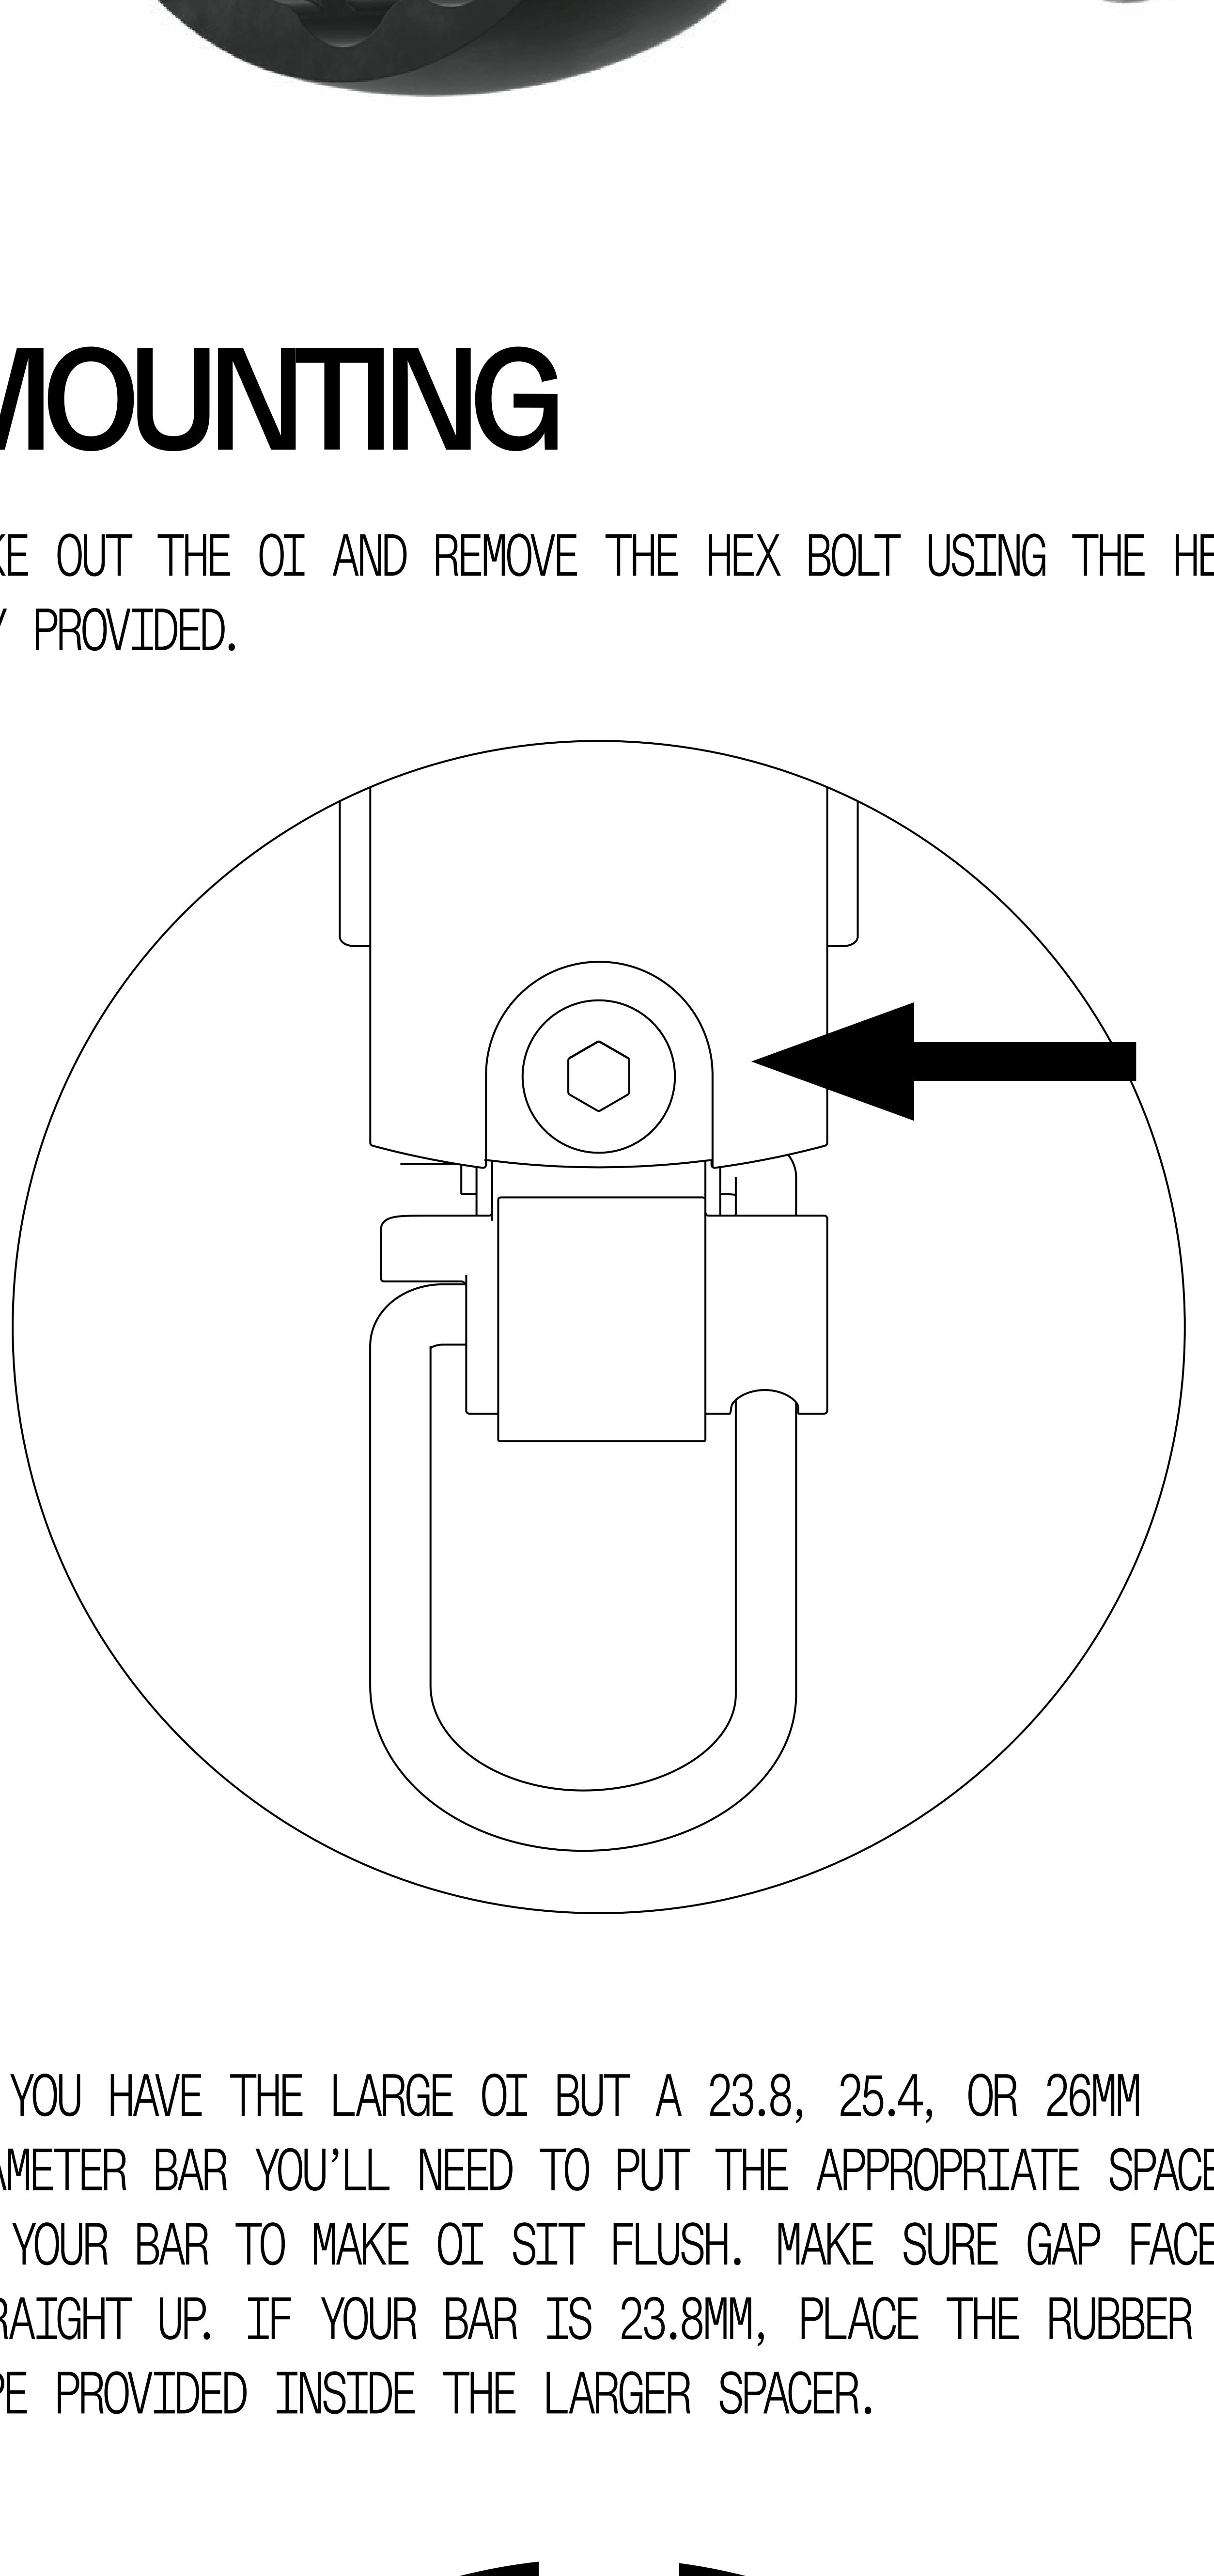


MOUNTING

TAKE OUT THE OI AND REMOVE THE HEX BOLT USING THE HEX KEY PROVIDED.

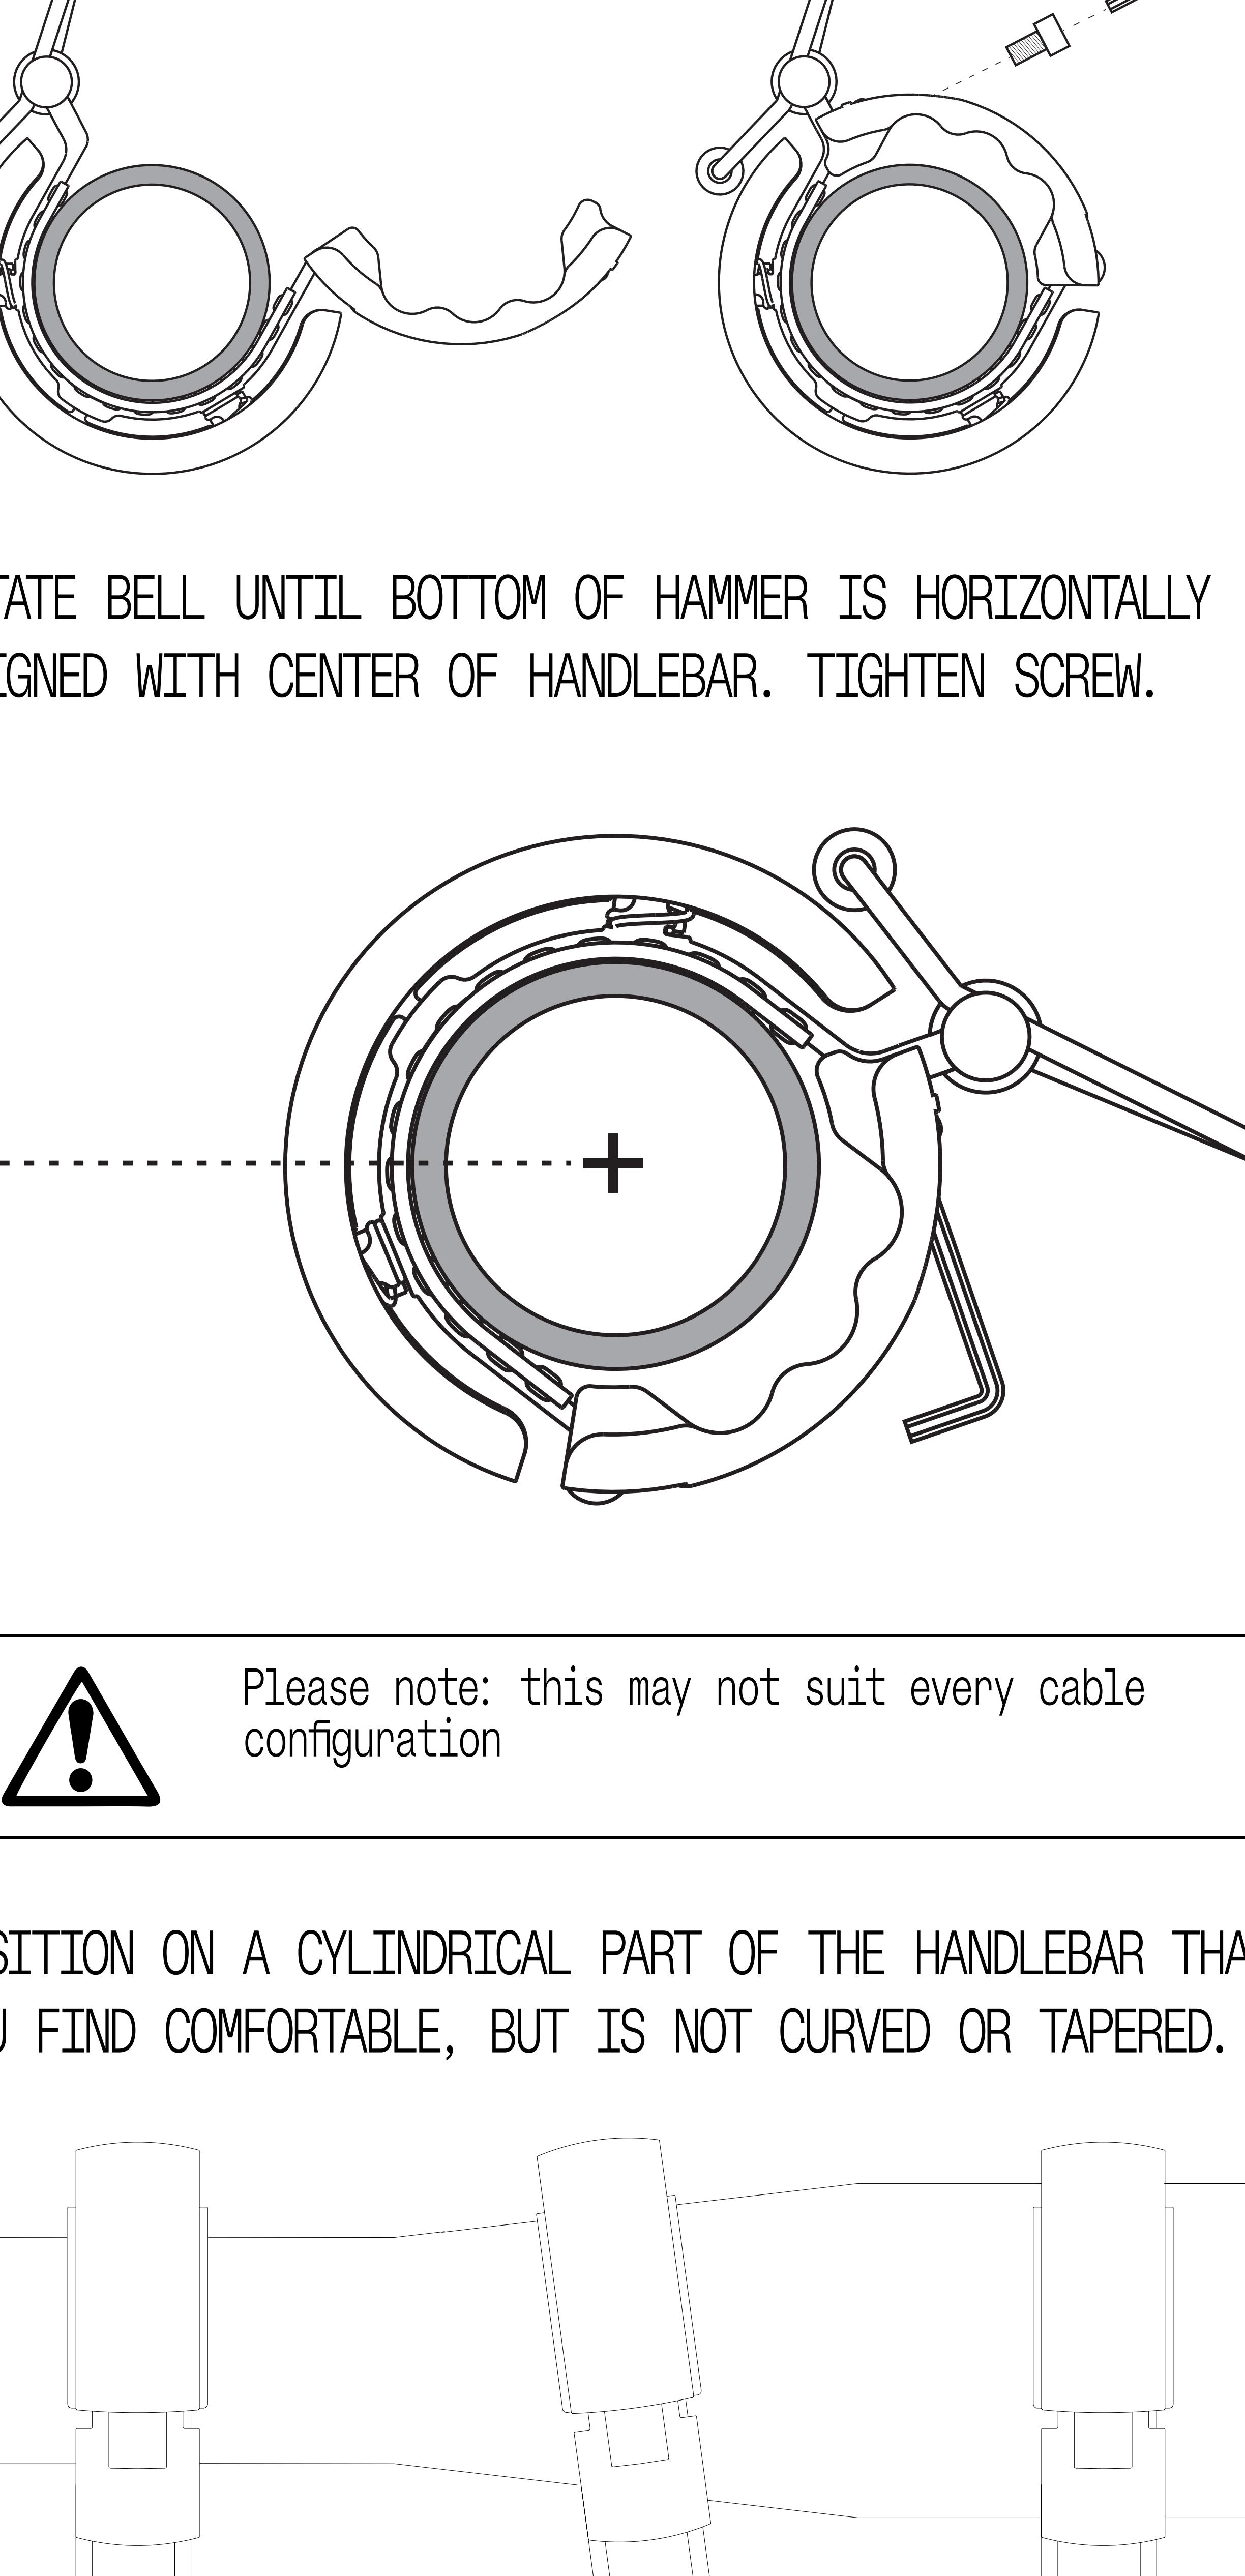

ASSEMBLE BELL ON HANDLEBAR UPSIDE DOWN. INSERT SCREW, BUT DO NOT TIGHTEN.

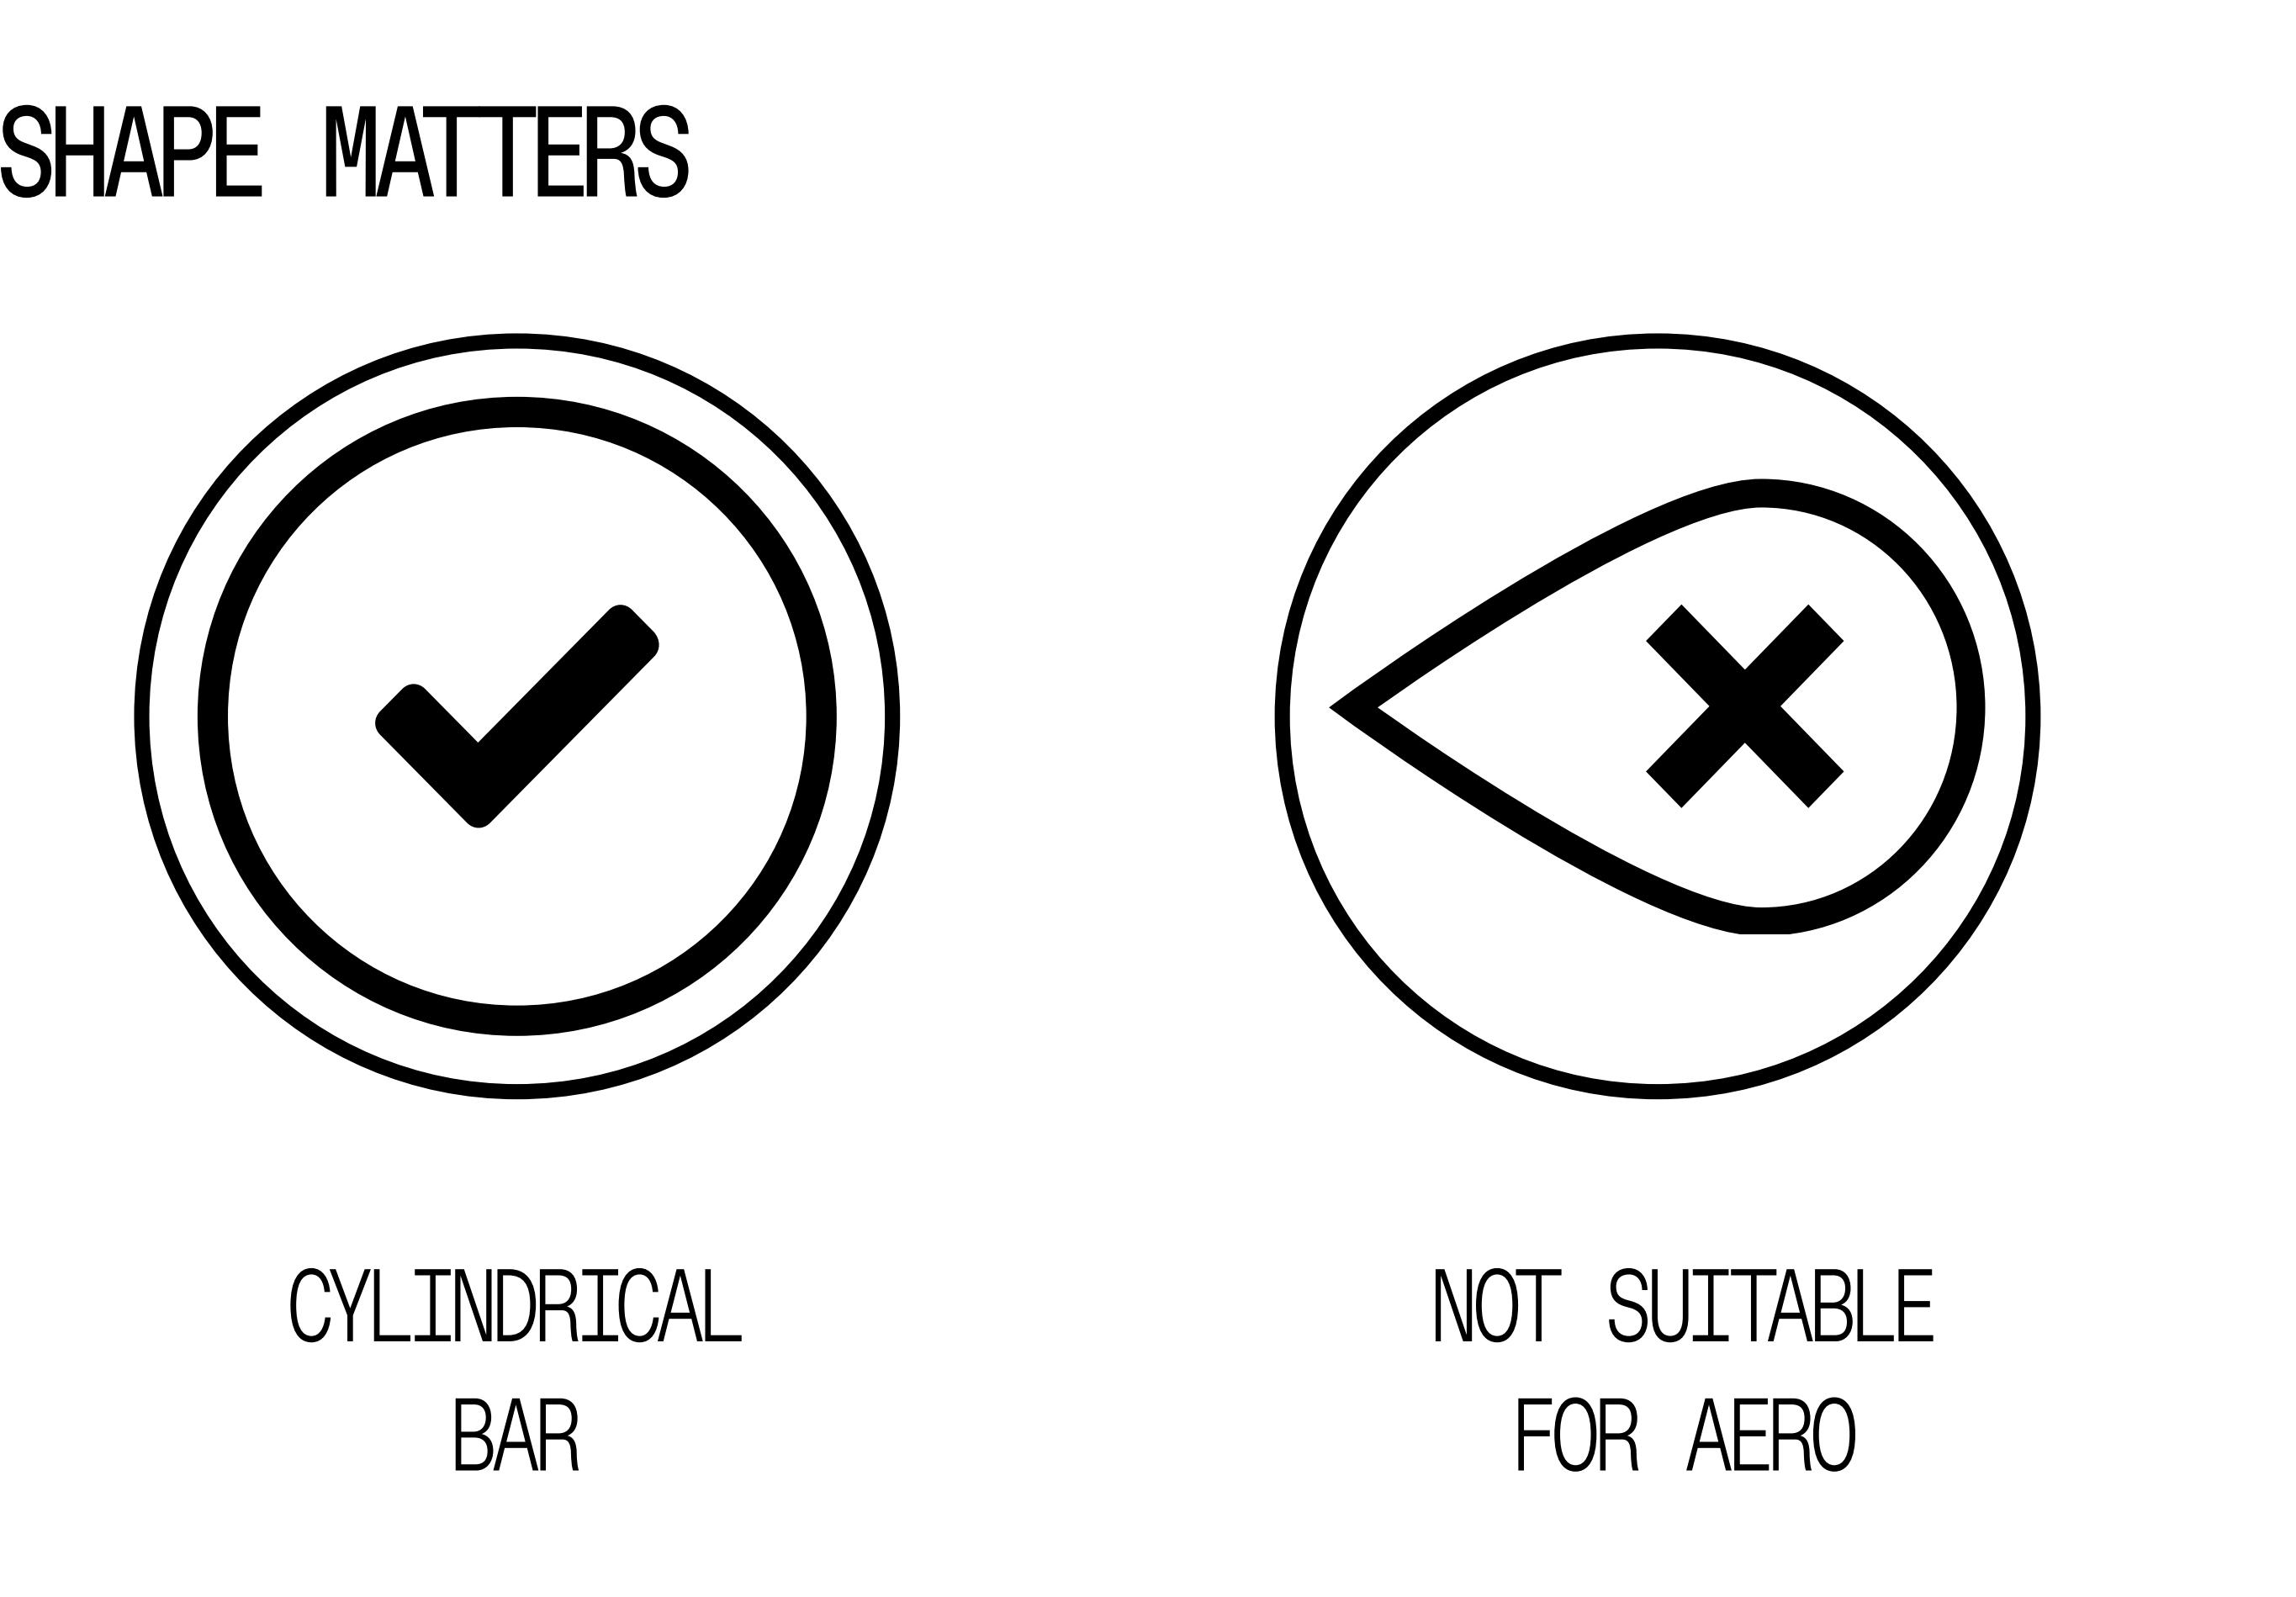

Oi! This is a precision instrument! Treat with the same care that you would your bike's other parts: your spokes, your derailleurs, your rear lights, your rear. If you're in doubt about how to mount, use, or troubleshoot the Oi, visit the Knog website or, of course, your local bike shop.

DON'T FORGET

SIZE MATTERS

SHAPE MATTERS

TECHNICALLY UNCONVENTIONAL

DESIGNED IN NAARM (MELBOURNE) BY KNOG. © 2018 KNOG CORPORATION. 2 YEAR WARRANTY. DETAILS AT KNOG.COM

KNOG