


# Oi® Classic

## QUICKSTART GUIDE




## MOUNTING


TAKE OUT THE OI AND REMOVE THE HEX BOLT USING THE HEX KEY PROVIDED.

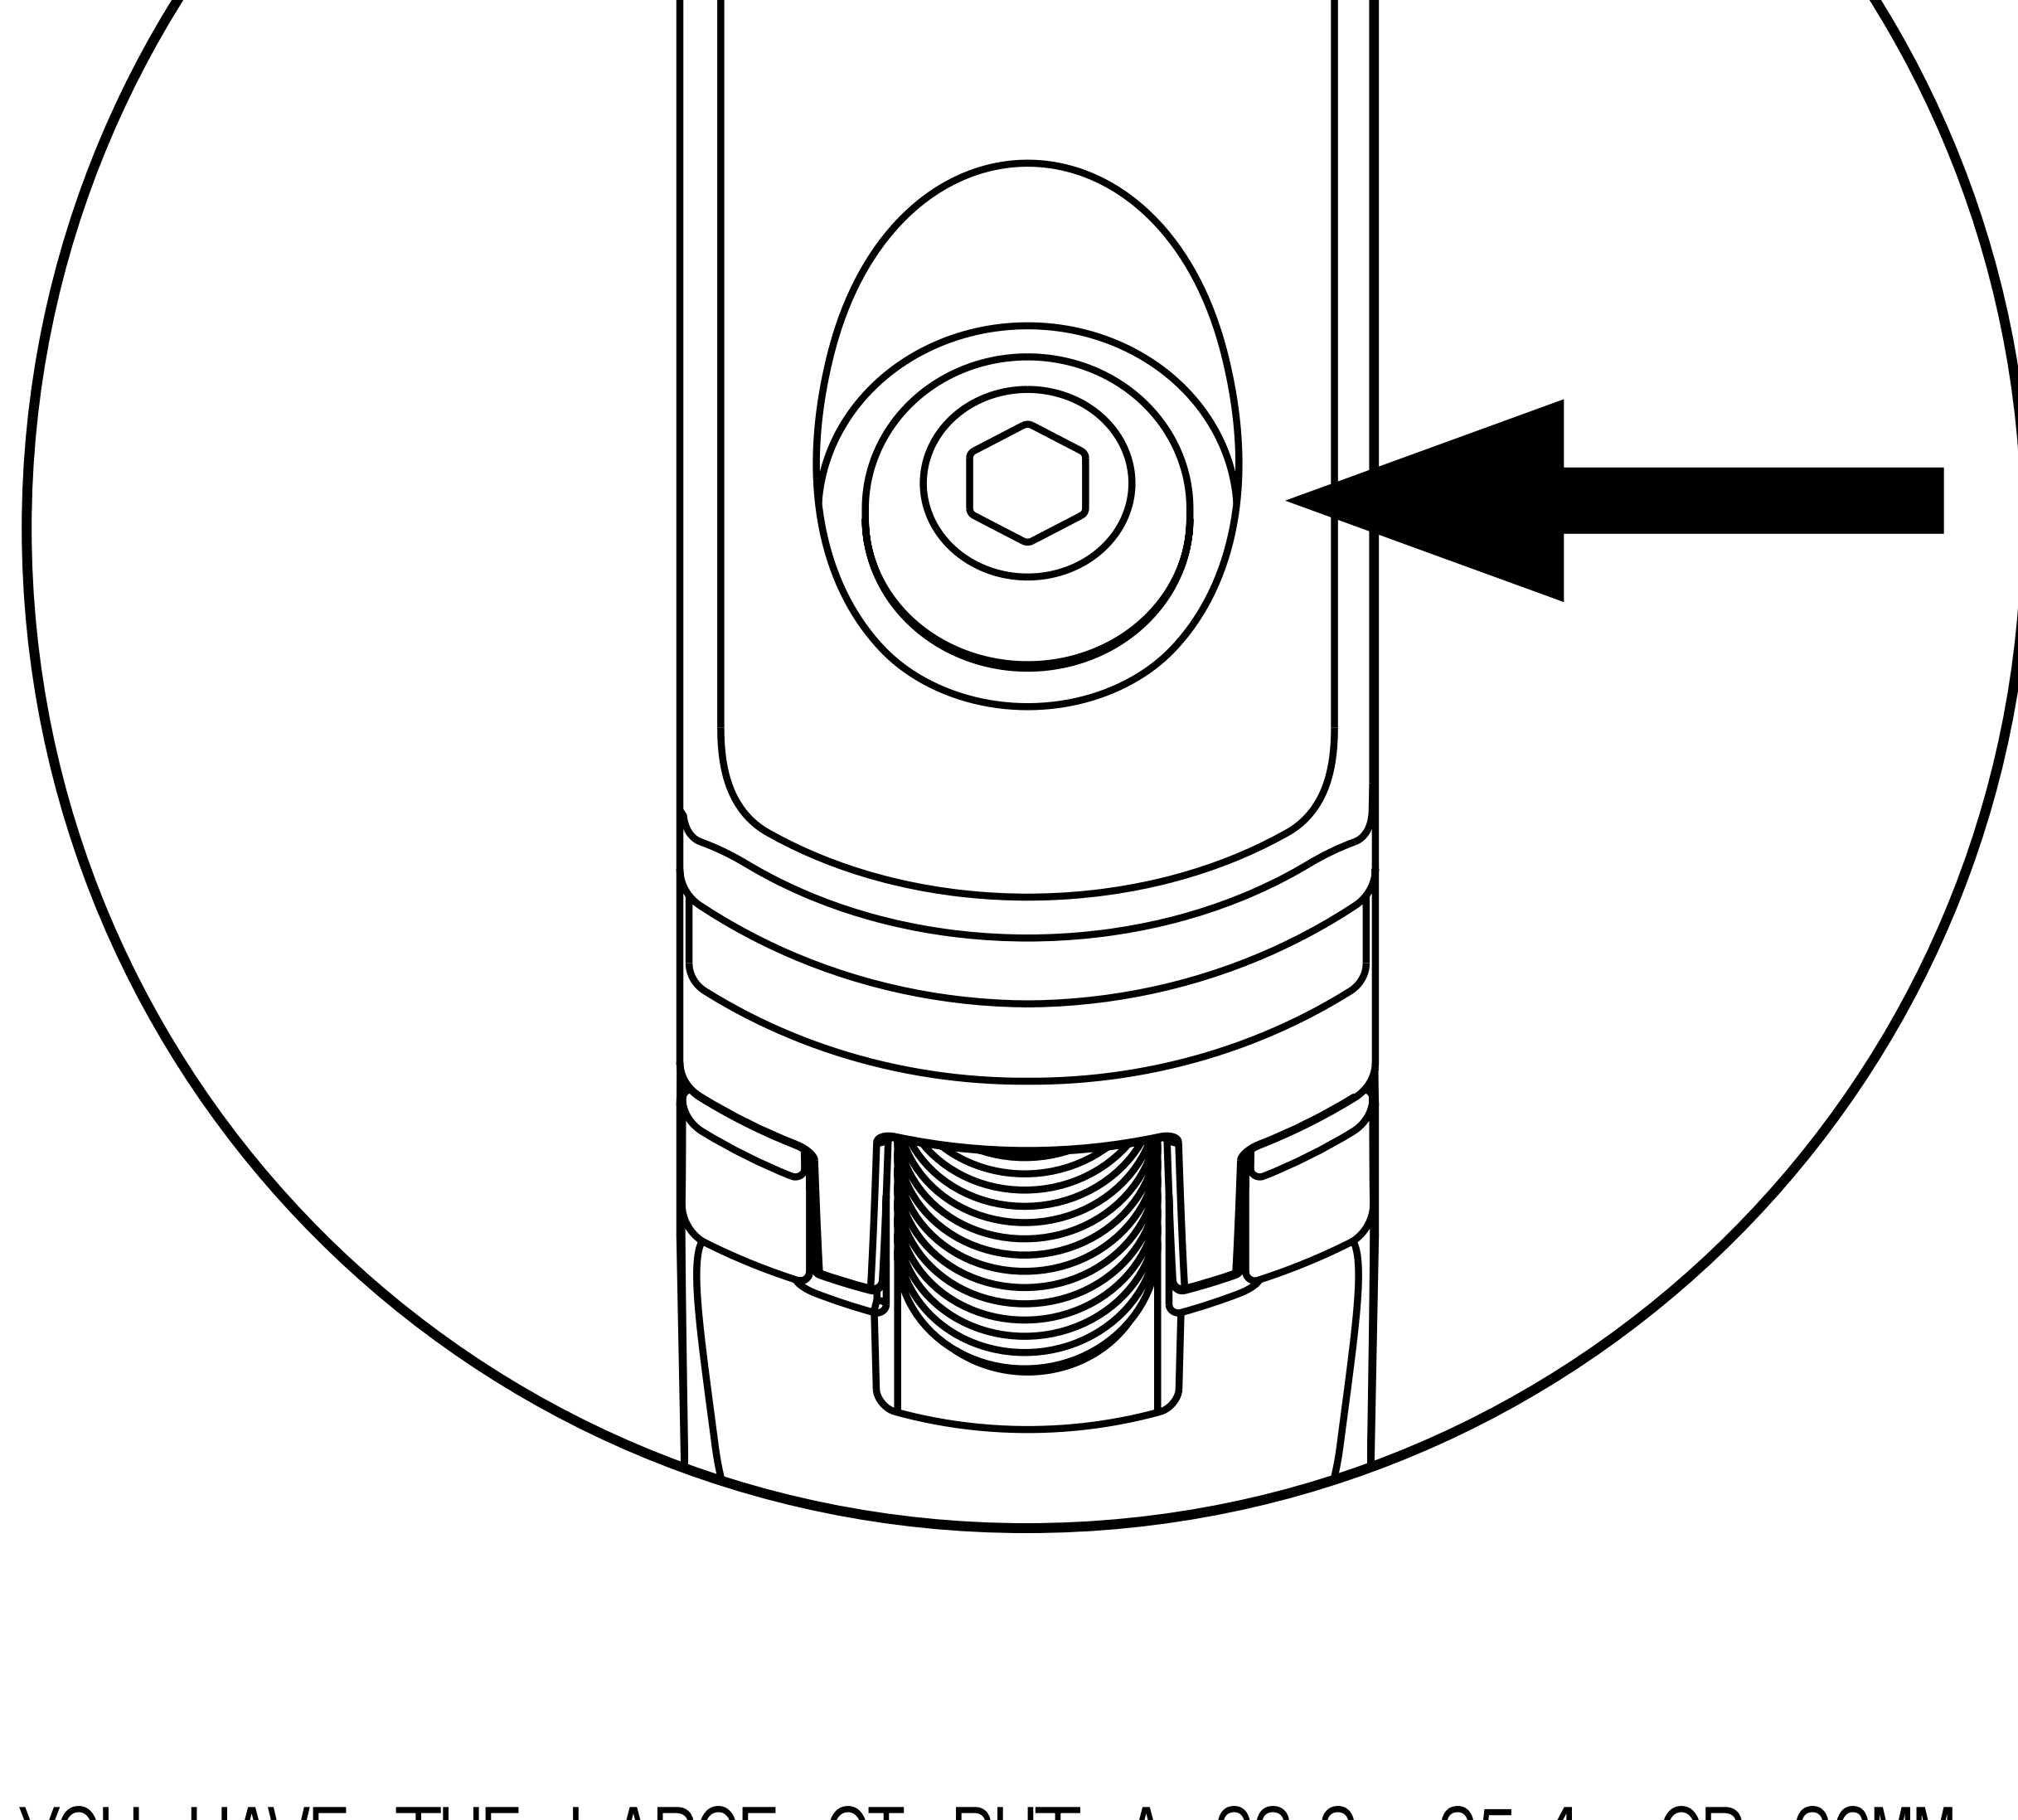


IF YOU HAVE THE LARGE OI BUT A 23.8, 25.4, OR 26MM DIAMETER BAR YOU'LL NEED TO PUT THE APPROPRIATE SPACER ON YOUR BAR TO MAKE OI SIT FLUSH. MAKE SURE GAP FACES STRAIGHT UP. IF YOUR BAR IS 23.8MM, PLACE THE RUBBER TAPE PROVIDED INSIDE THE LARGER SPACER.

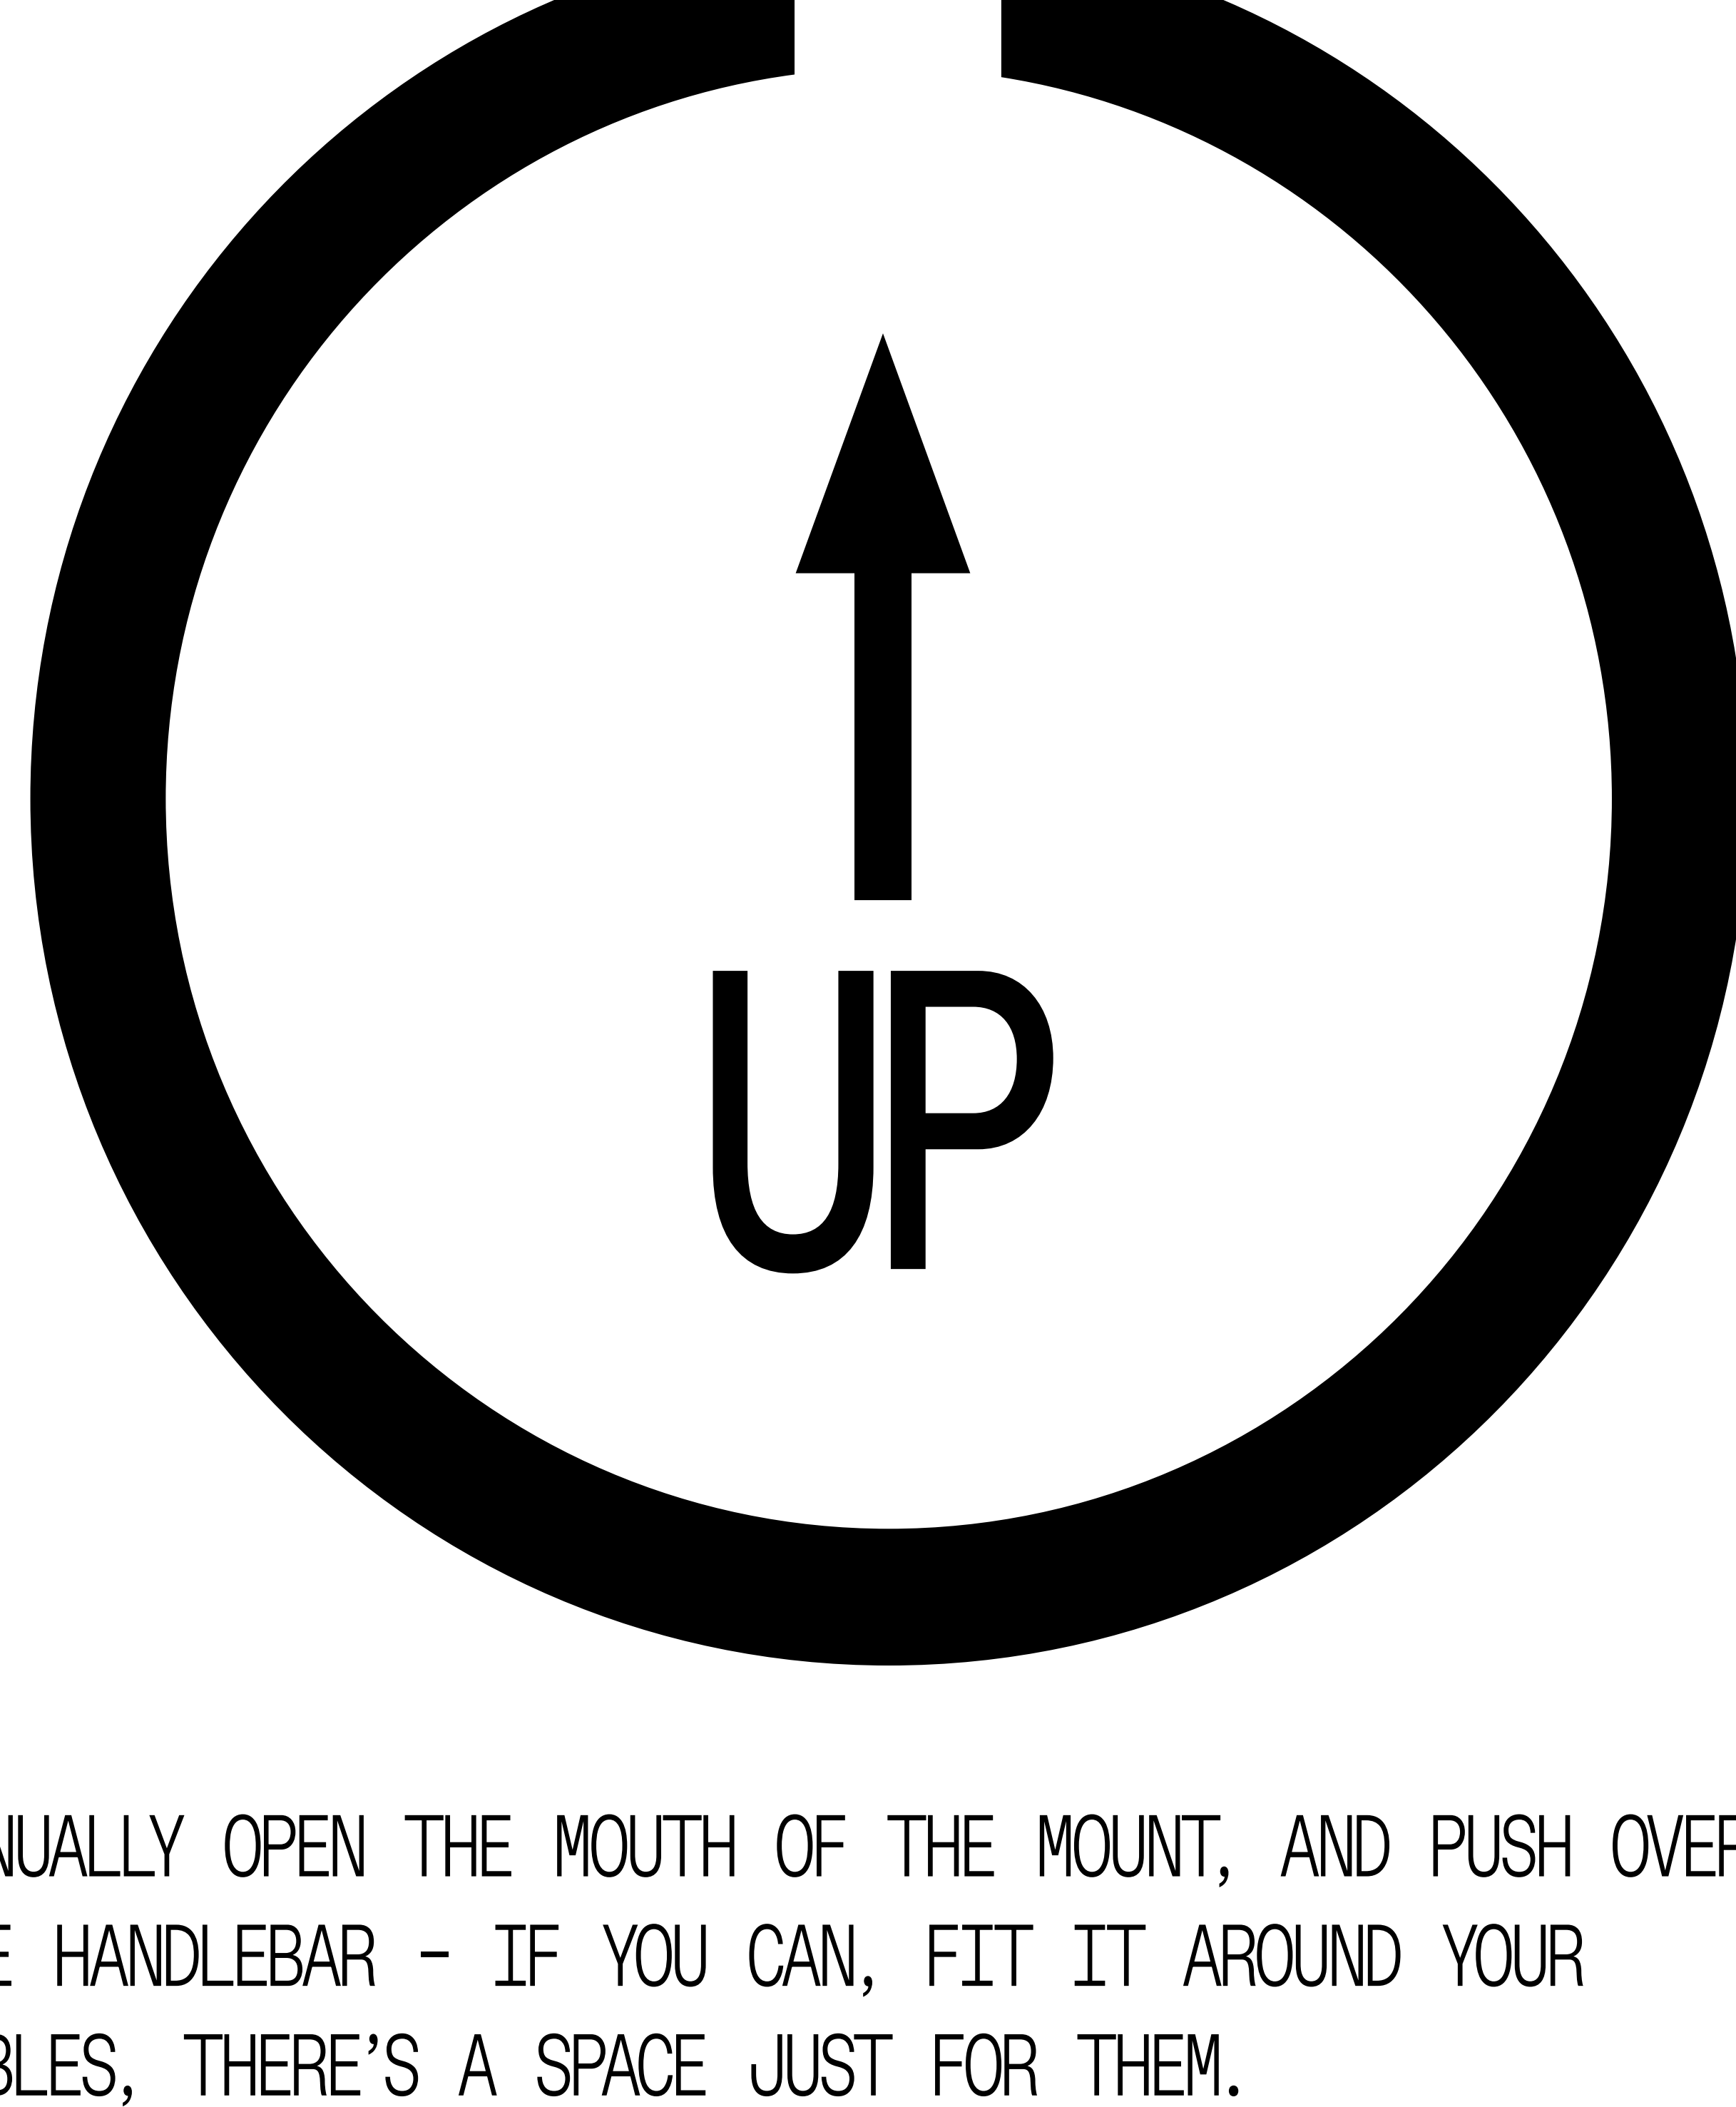


MANUALLY OPEN THE MOUTH OF THE MOUNT, AND PUSH OVER THE HANDLEBAR - IF YOU CAN, FIT IT AROUND YOUR CABLES, THERE'S A SPACE JUST FOR THEM.

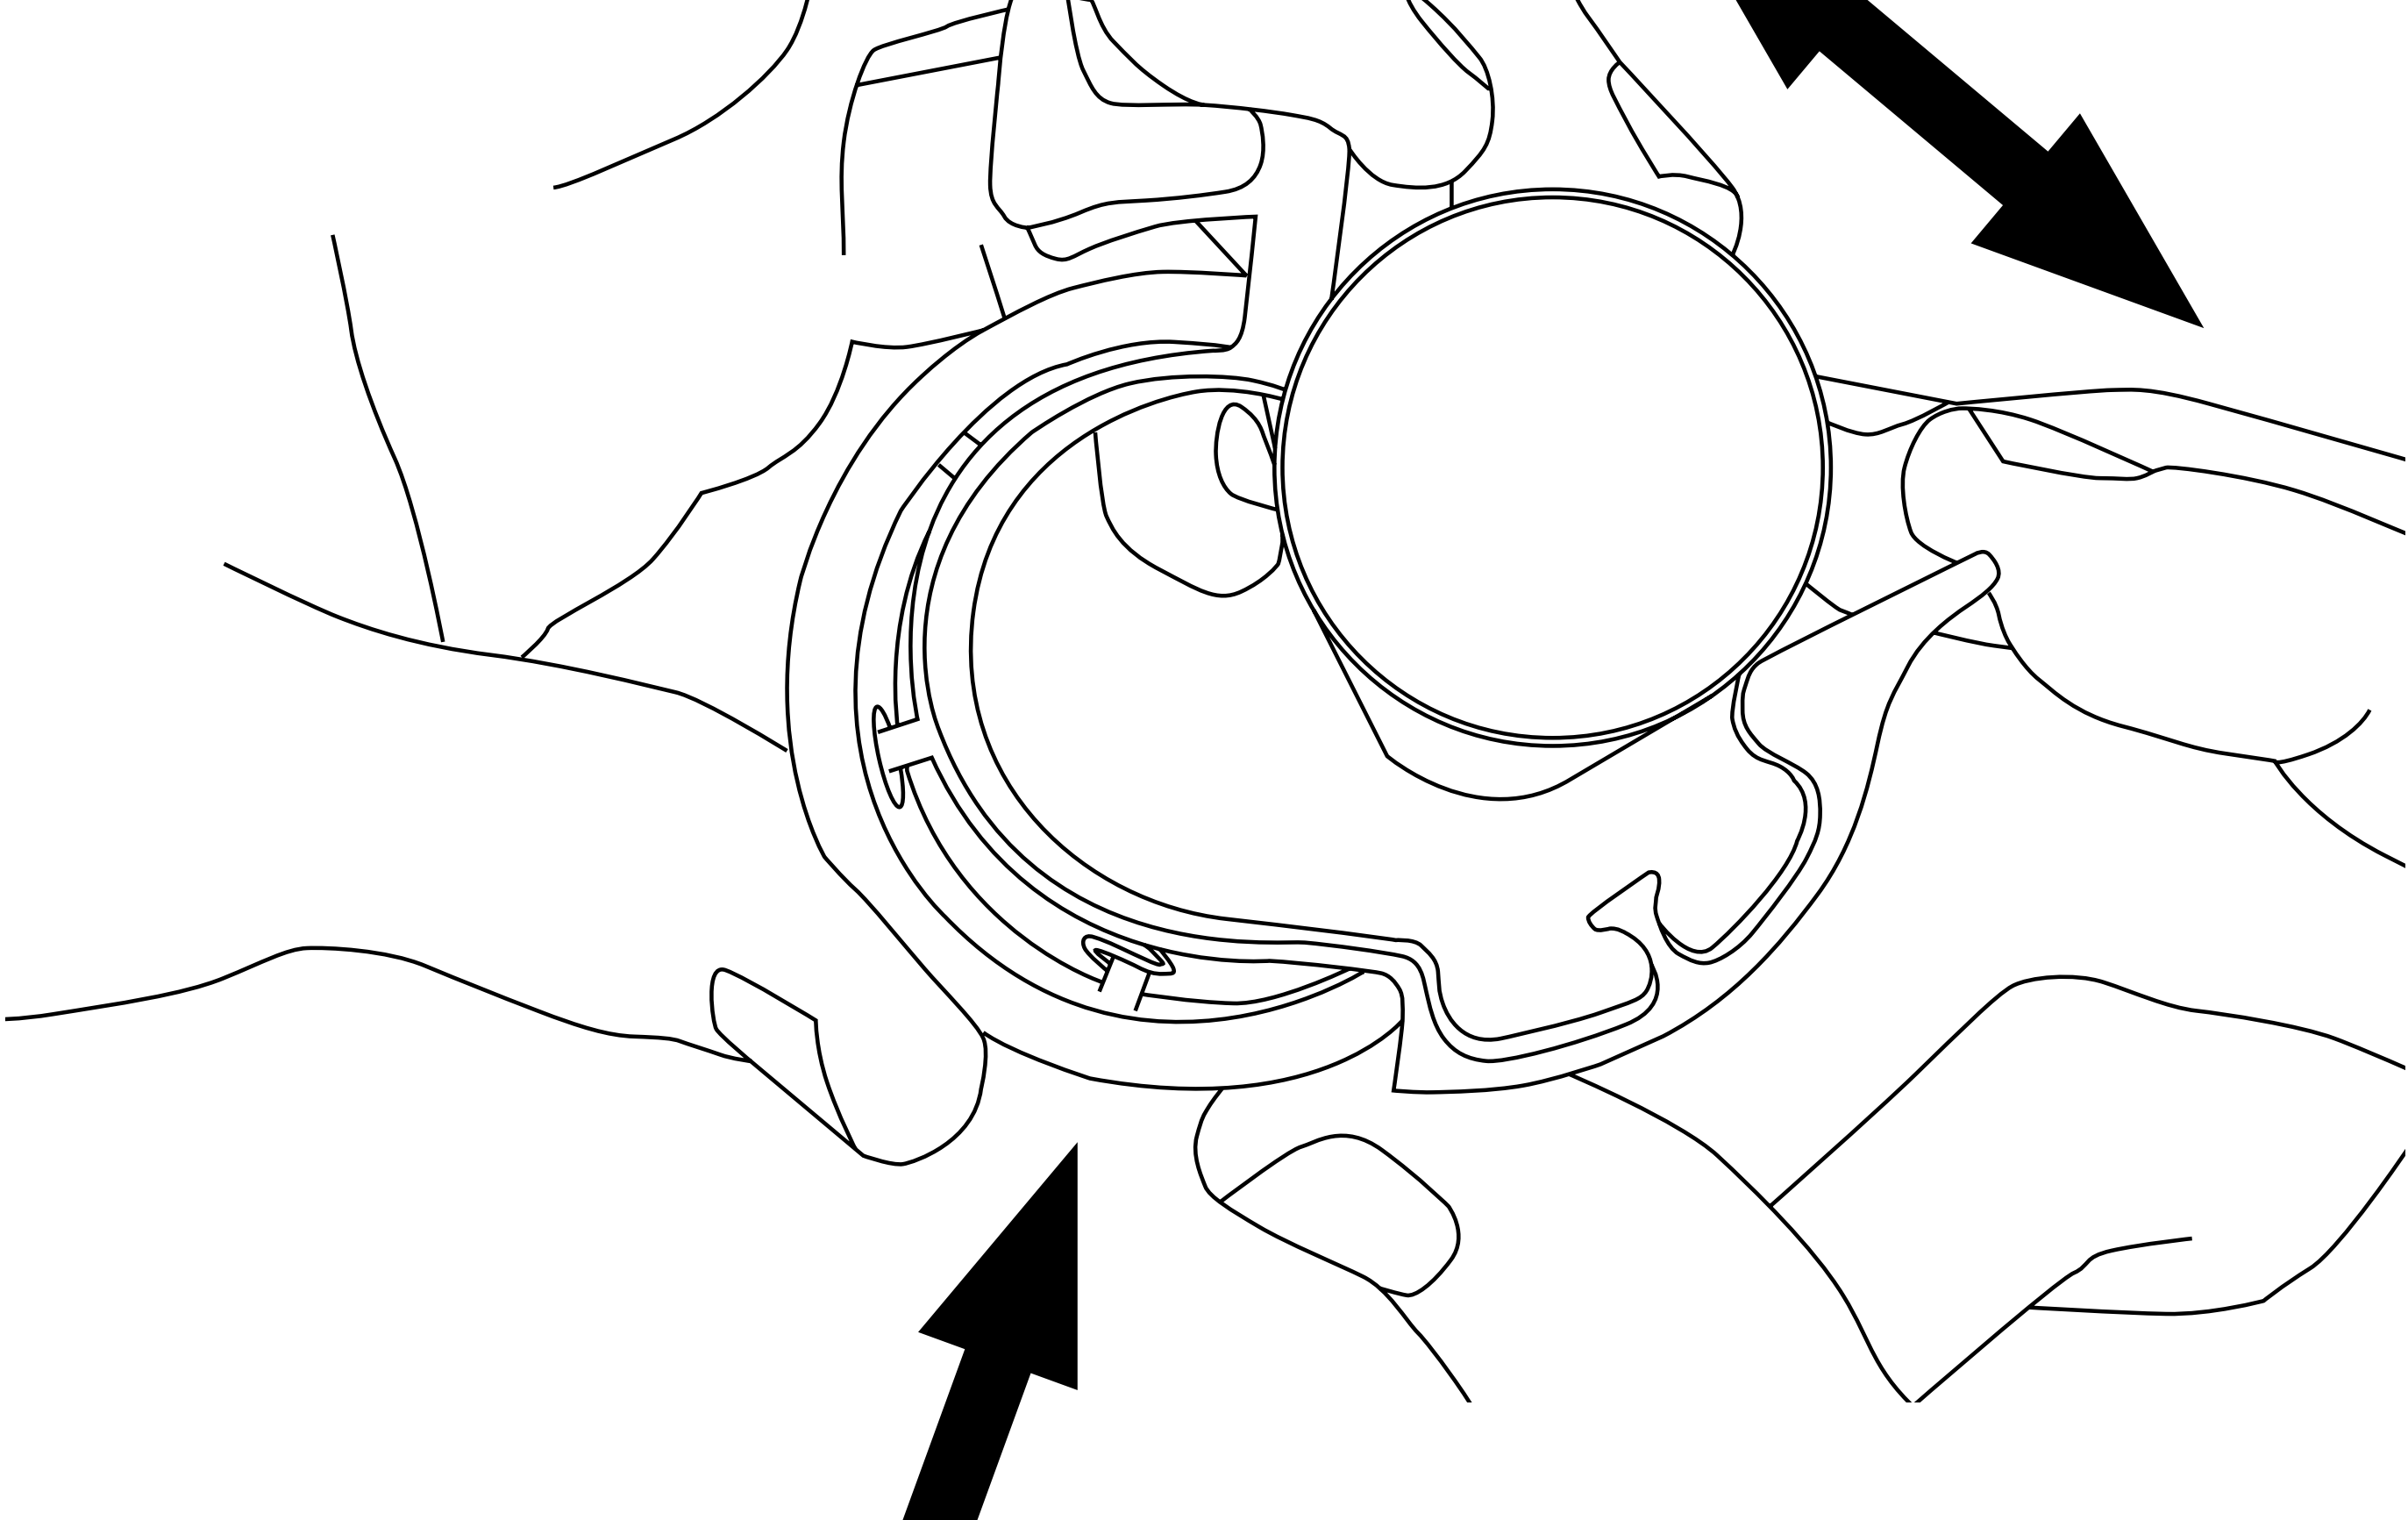

POSITION ON A CYLINDRICAL PART OF THE HANDLEBAR THAT YOU FIND COMFORTABLE, BUT IS NOT CURVED OR TAPERED. WE THINK CLOSE TO THE HANDLE/GRIP, SO YOUR THUMB CAN COMFORTABLY FLICK THE HAMMER.

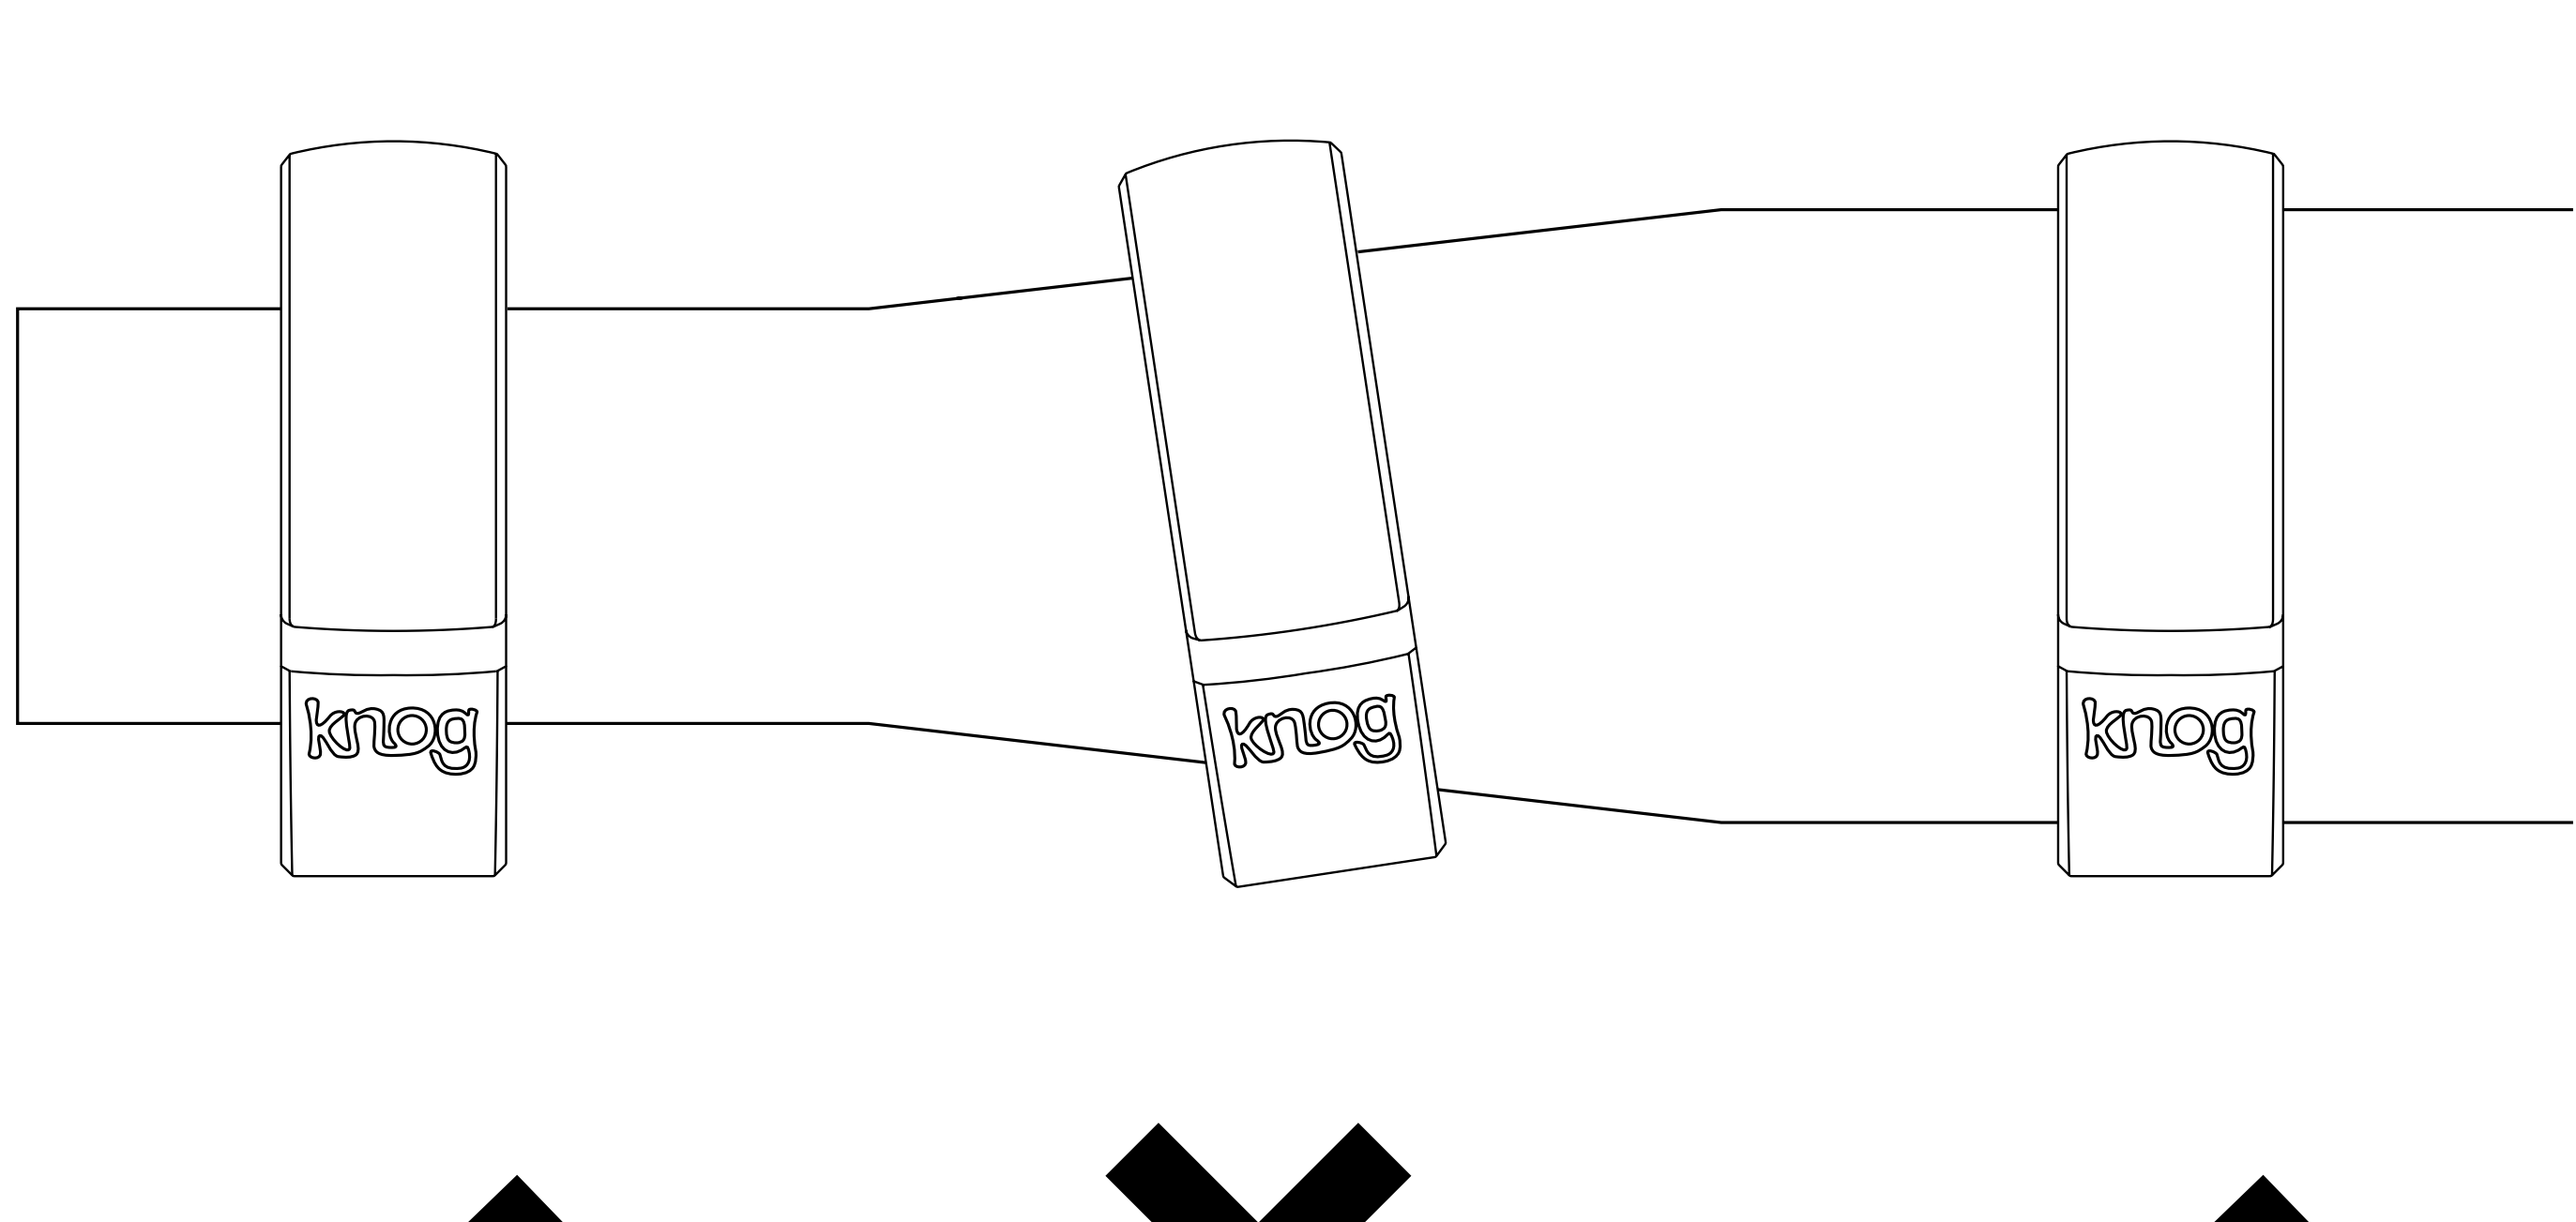

SCREW IN THE HEX BOLT, FIRM ENOUGH TO PREVENT ANY ROTATION (AND THEN A TINY BIT MORE) AND YOU'RE GOOD TO GO.

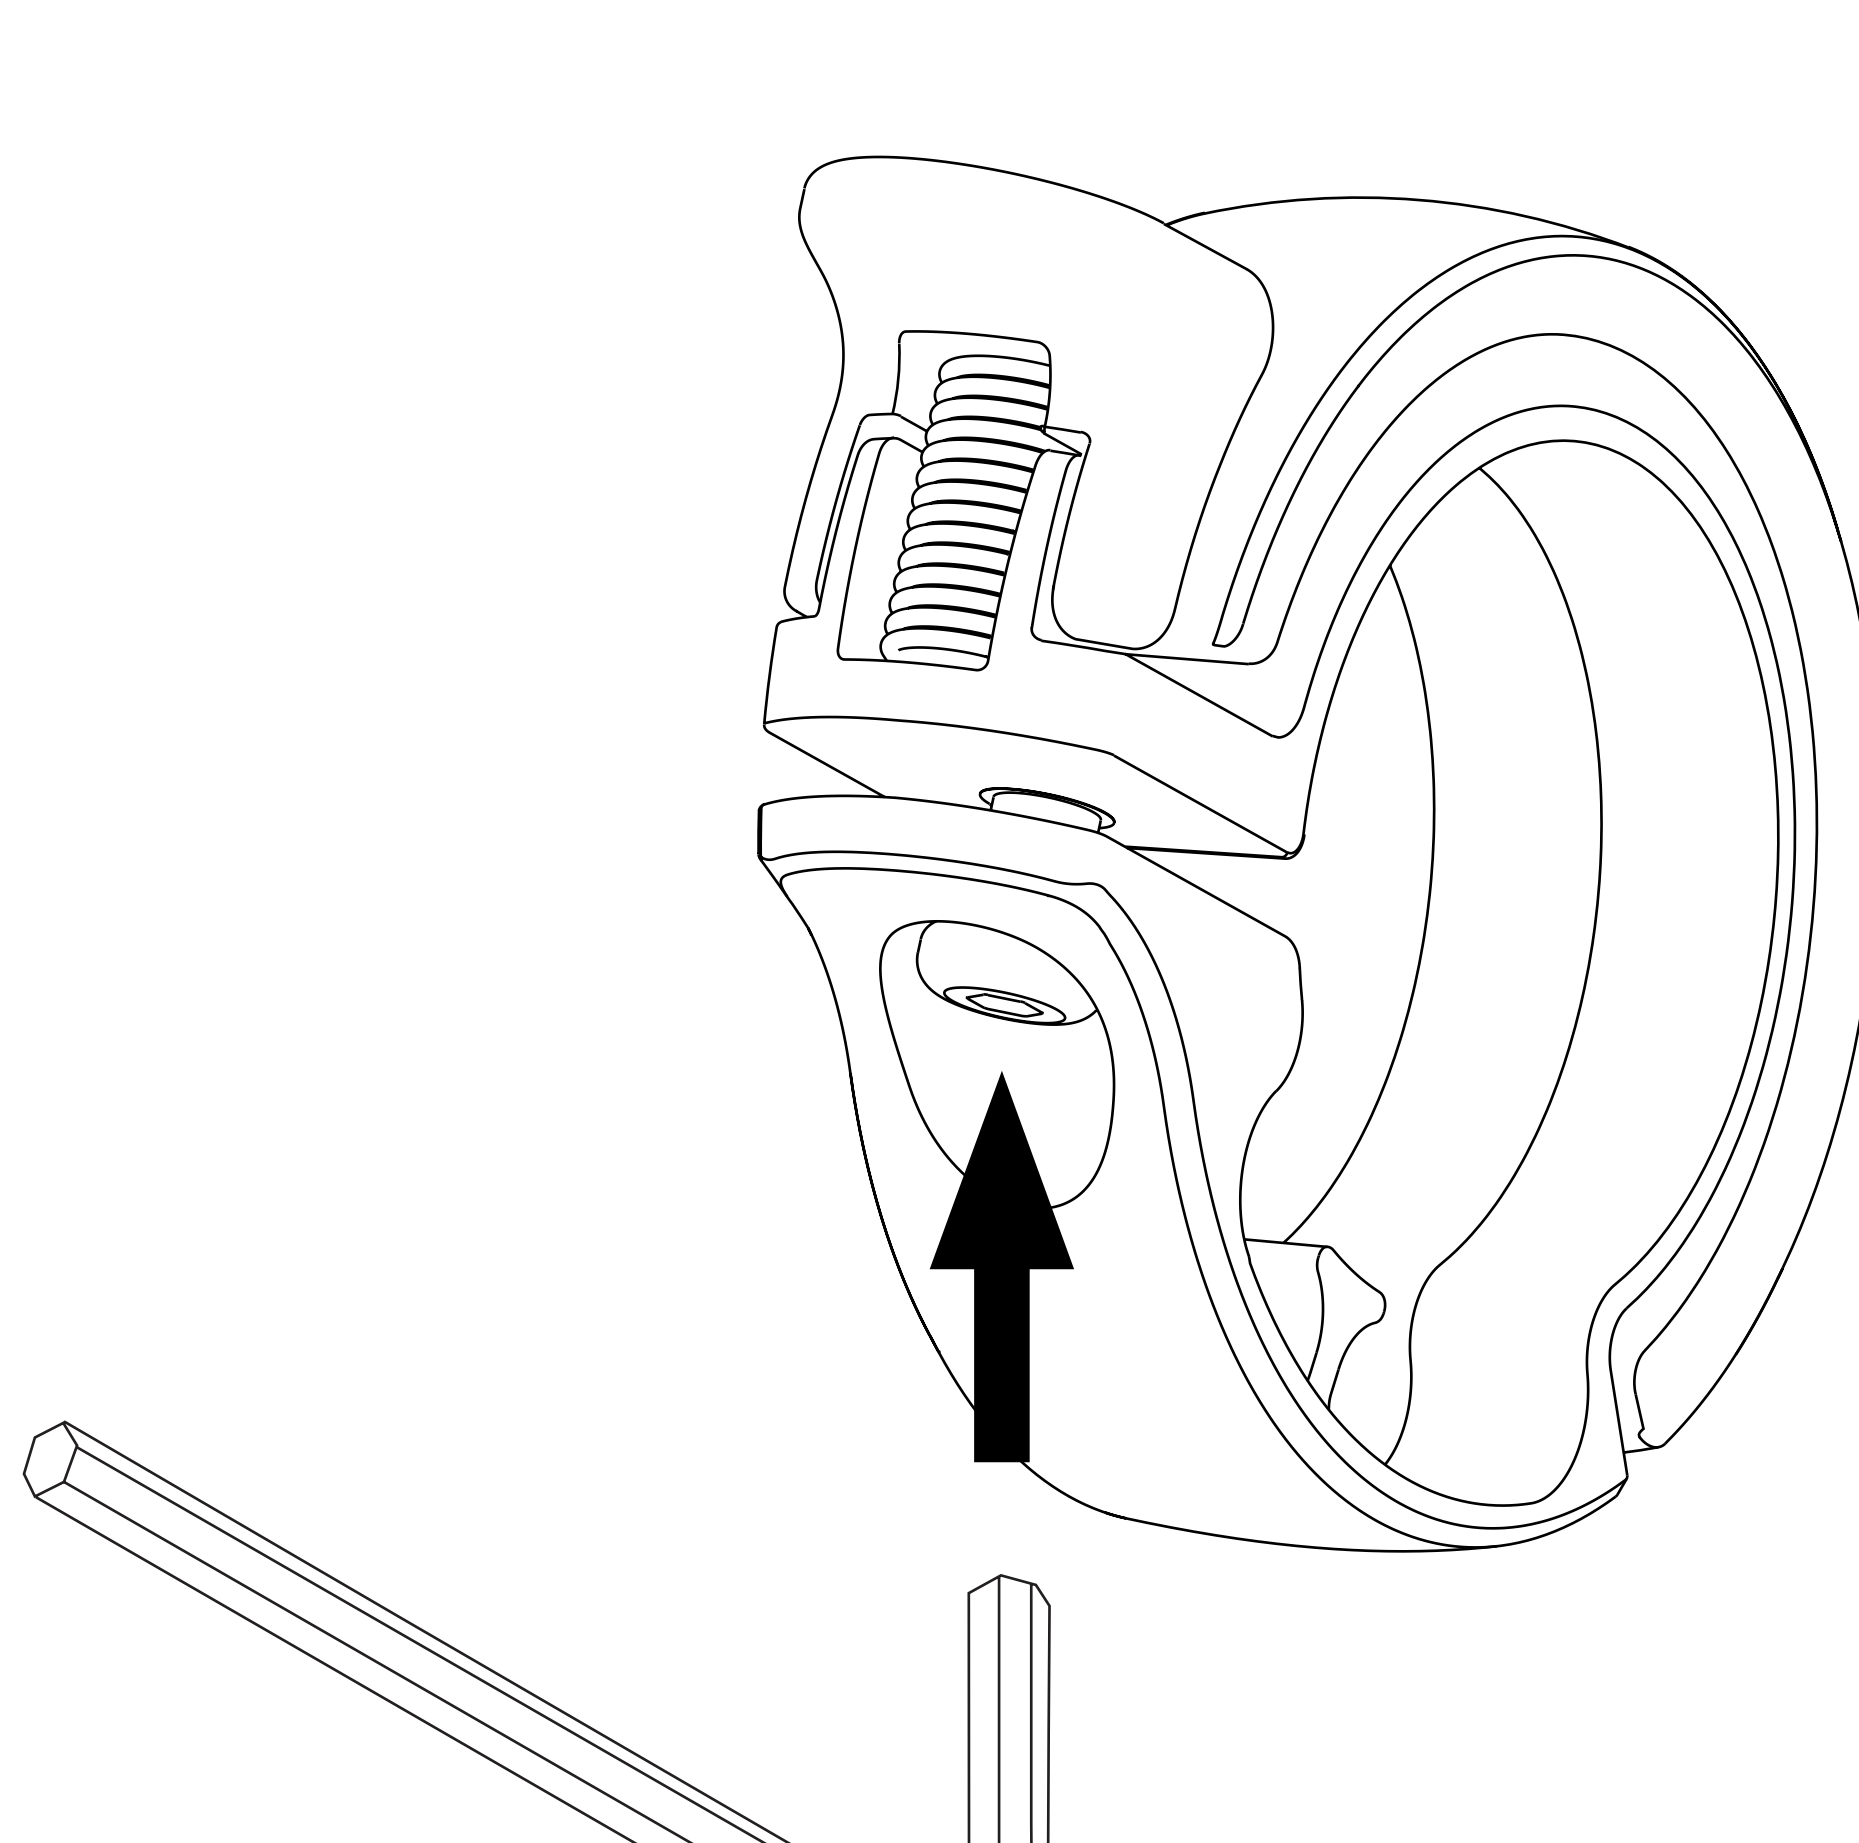

Oi! This is a precision instrument!

Treat with the same care that you would your bike's other parts: your spokes, your derailleurs, your rear lights, your rear.

If you're in doubt about how to mount, use, or troubleshoot the Oi, visit the Knog website or, of course, your local bike shop.

## DON'T FORGET


### SIZE MATTERS

SMALL OI FITS:




22.2MM  
ONLY

LARGE OI FITS:

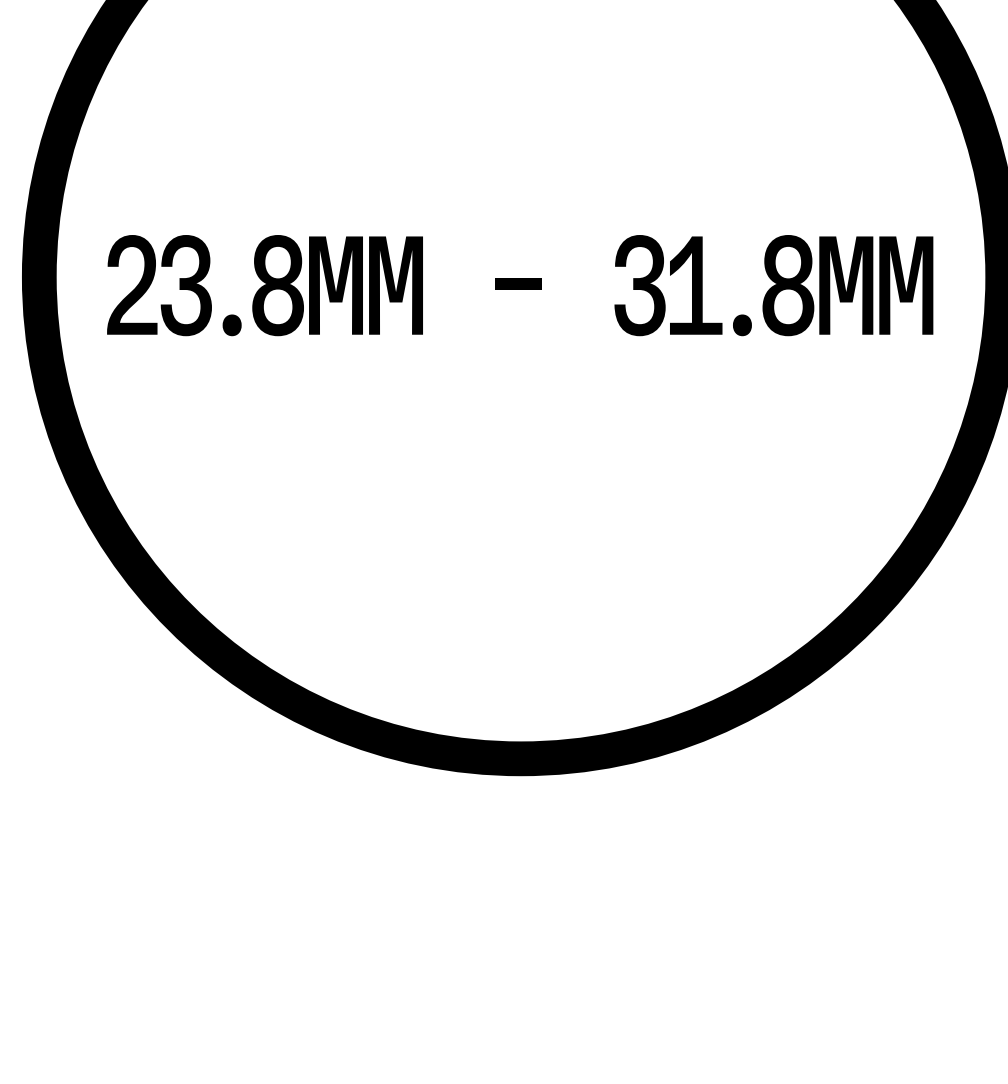


23.8MM - 31.8MM

### SHAPE MATTERS

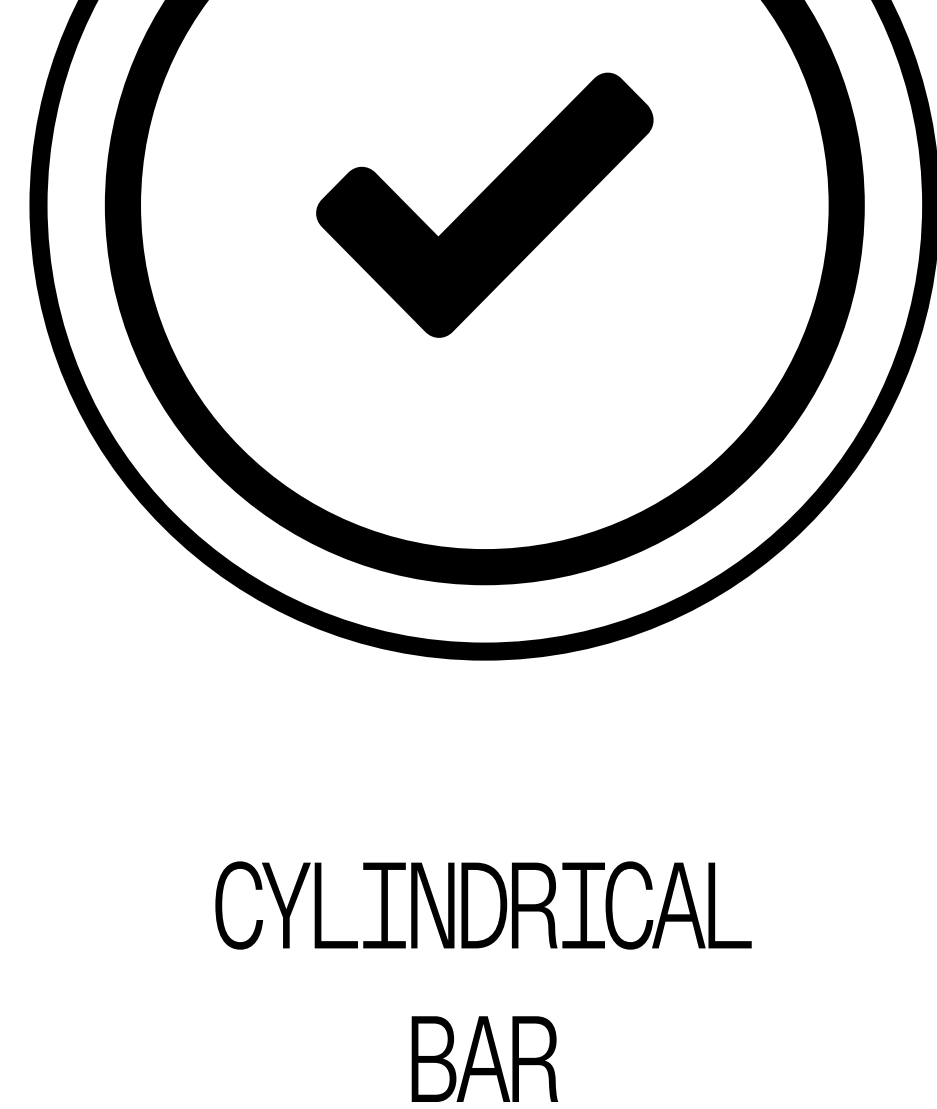

CYLINDRICAL  
BAR

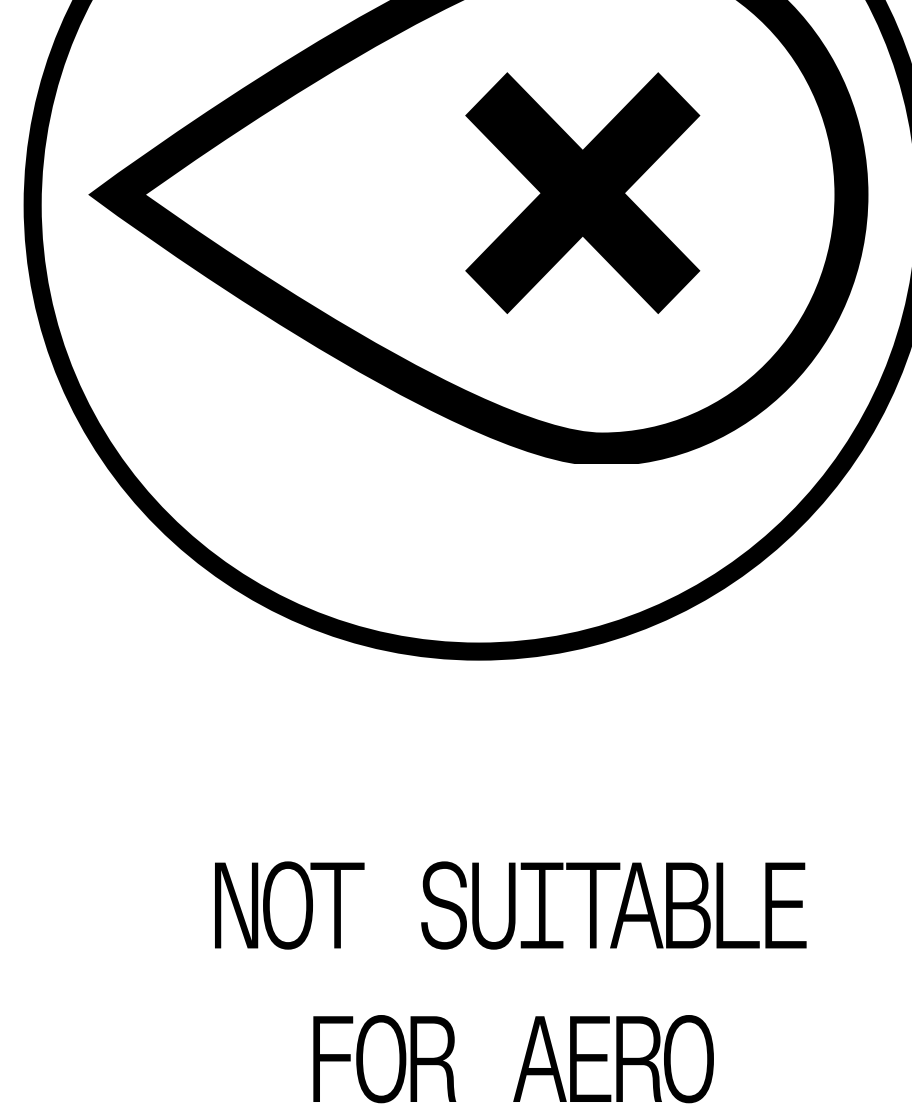

NOT SUITABLE  
FOR AERO



TECHNICALLY  
UNCONVENTIONAL

DESIGNED IN NAARM [MELBOURNE] BY KNOG ®  
2 YEAR WARRANTY-DETAILS AT KNOG.COM