# Oi Prima QUICKSTART GUIDE

## MOUNTING

IF YOU HAVE THE LARGE OI BUT A 23.8, 25.4, OR 28MM DIAMETER BAR, YOU'LL NEED TO USE A SPACER TO MAKE OI SIT FLUSH.

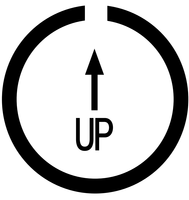


APPLY THE SPACER TO YOUR HANDLEBAR, ENSURING THE GAP FACES STRAIGHT UP. IF YOUR BAR IS 23.8MM, USE THE ADDITIONAL RUBBER TAPE PROVIDED AROUND THE LARGER SPACER.

TAKE OUT THE OI AND REMOVE THE HEX BOLT USING THE HEX KEY PROVIDED.

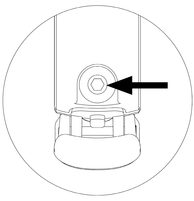

POSITION THE OI WHERE YOU WOULD LIKE IT ALONG THE HANDLEBAR.

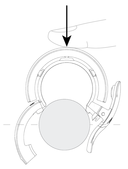

FIRMLY PRESS STRAIGHT DOWN ON THE RINGER.

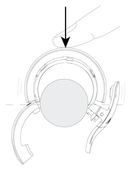

THE OI WILL STRETCH AND "SNAP" OVER THE WIDEST PART OF THE BAR. YOU CAN THEN ASSEMBLE THE BELL ON THE HANDLEBAR. INSERT THE SCREW, BUT DO NOT TIGHTEN.

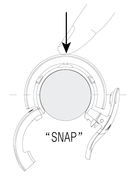


ROTATE BELL UNTIL THE HAMMER IS IN YOUR DESIRED POSITION. TIGHTEN SCREW.

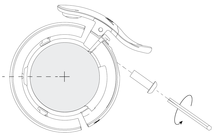

Please note: this may not suit every cable configuration

POSITION ON A CYLINDRICAL PART OF THE HANDLEBAR THAT YOU FIND COMFORTABLE, BUT IS NOT CURVED OR TAPERED.

Oi! This is a precision instrument!
Treat with the same care that you would your bike's other parts: your spokes, your derailleurs, your rear lights, your rear.
If you're in doubt about how to mount, use, or troubleshoot the Oi, visit the Knog website or, of course, your local bike shop.

## DON'T FORGET

### SIZE MATTERS

### SHAPE MATTERS

CYLINDRICAL BAR

NOT SUITABLE FOR AERO

**TECHNICALLY UNCONVENTIONAL**

DESIGNED IN NAARM [MELBOURNE] BY KNOG ®
2 YEAR WARRANTY-DETAILS AT KNOG.COM