geboMized
PROTECT YOUR FIT
DESIGNED IN NAARM (MELBOURNE) BY KNOG
STVZO CERTIFIED

Blinder®Link QUICKSTART GUIDE

KNOG

WHAT'S IN THE BOX

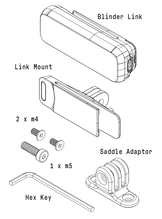

OPERATION

LONG PRESS - ON/OFF
QUICK PRESS - CYCLES THROUGH MODES

BATTERY STATUS

WHEN THE BATTERY IS RUNNING LOW, THE RED LED WILL APPEAR.

CHARGING

CAREFULLY OPEN CHARGING-PORT HATCH

INSERT USB-C CHARGING CABLE
RED LED INDICATES CHARGING

GREEN LED INDICATES FULLY CHARGED

MOUNTING

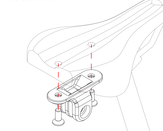

USING THE 2 X M4 BOLTS, FIX THE MOUNT TO THE UNDER SIDE OF THE SADDLE



TIGHTEN THE M4 BOLTS

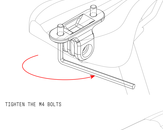

ALIGN BLINDER LINK MOUNT WITH GEBOMIZED SADDLE ADAPTOR AND INSERT THE M5 BOLT

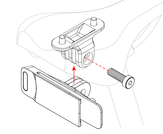

LOOSLY FASTEN THE BLINDER LINK MOUNT TO THE GEBOMIZED SADDLE ADAPTOR USING THE INCLUDED M5 BOLT.

SLIDE BLINDER LINK LIGHT ONTO MOUNT

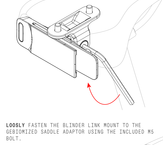

ADJUST THE LIGHT SO THE LENS FACE IS PERPENDICULAR TO THE ROAD SURFACE.

ONCE IN POSITION, TIGHTEN THE M5 BOLT.



NOTE: THE LIGHT SHOULD BE MOUNTED WITHIN THE HEIGHT SPECIFICATION BELOW

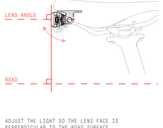

MODES & RUNTIMES

MODE	LUMENS	RUNTIME
HIGH	25	4.25hr
MEDIUM	15	6.5hr
LOW	10	11hr

KNOG®

TECHNICALLY UNCONVENTIONAL

DESIGNED IN NAARM (MELBOURNE) BY KNOG CO
2 YEAR WARRANTY-DETAILS AT KNOG.COM